EU Keyswitch Harness Immobilizer Instructions– Racing Use Only

INTERNATIONAL

(FOR USE WITH IMMOBILIZERS)

1. The immobilizer will be located within the OEM ignition switch housing. Remove the immobilizer sensor from the housing to separate it from the ignition switch.

2. The immobilizer ring will vary with different motorcycle manufactures use a different type ring (see fig 1. for example).

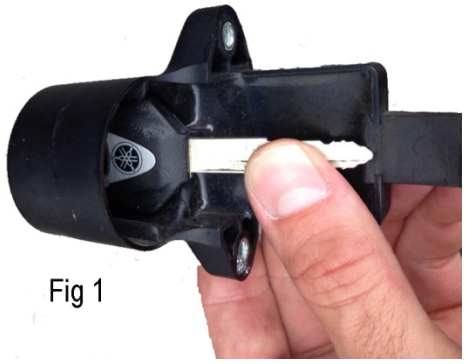


Fig 1

3. Secure the key in place, using electrical tap or similar, as shown in Fig 2.

4. The immobilizer can now be reconnected and installed on the motorcycle.

5. The key switch elimination harness can now be installed.

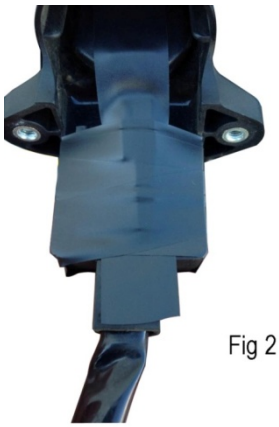


Fig 2

WARNING:Installation and use of some Woodcraft Technologies, Inc. products will change the response of the motorcycle to rider control inputs. Failure of the rider to adapt to these changes may cause loss of control, and serious injury or death. Improper installation, and/or failure to comply with all warnings and instructions may cause loss of control and serious injury or death. DO NOT INSTALL OR USE ANY WOODCRAFT TECHNOLOGIES, INC. PRODUCTS IF YOU ARE UNABLE TO DO SO IN COMPLIANCE WITH ALL INSTRUCTIONS AND WARNINGS. SEEK THE ASSISTANCE OF AN EXPERIENCED TECHNICIAN.