
Ducati 50-0660
Standard Slider Kit
Mounting Instructions

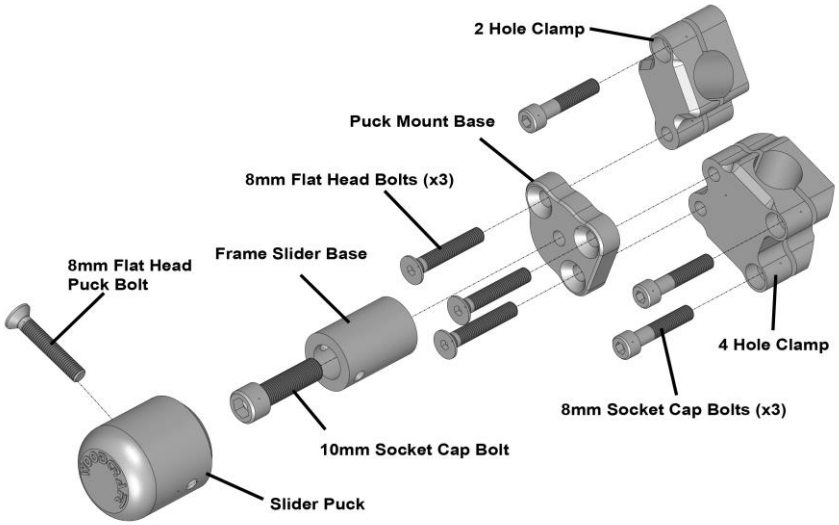

Right Side Setup Shown

1. Mount the larger 4-hole mounting clamp to the forward vertical tube of the motorcycle. Start by sliding the back side of the clamp (the threaded portion) around the back side of the frame tube. Loosely secure this part to the top portion of the clamp using the 8mm socket cap bolts trough the two outer mounting points.

2. Mount the smaller 2-hole mounting clamp to the back slanted tube of the motorcycle. These clamps are different left & right – be sure that the right side is oriented as shown at the right. Start by sliding the threaded portion of the clamp around the back side of the frame tube. Loosely secure this part to the upper portion of the clamp using the 8mm socket cap bolt.

3. Mount the puck mount base loosely to the clamps using the (3) flat head countersunk bolts. The bolts first pass through the mount base and thread into the clamps. All parts must be able to move freely at this point in order to allow for adjustment.

4. Once they are all finger tight, lightly snug the three flat head countersunk bolts. Adjust the position of the base so that it sits flat and directly against both mounting clamps. Snug the sockets cap bolts by hand and be sure that the gap on each side of the clamps is roughly equal. Again, be sure that the base is flat against the clamps.

5. Torque the bolts on either side of each frame rail for both clamps incrementally and evenly until you reach a final torque of about 18 ft-lbs.

6. Install the puck base onto the puck base using the 10mm bolt through the center of the base.

7. Slide the plastic slider over the top of the base and secure in place using the 8mm countersunk bolt provided. The bolt passes first through the non-threaded hole and then screws into the threaded hole on the far side of the base. The plastic is undersized on the far side of the slider to act as a locknut for the bolt.

8. Repeat the same procedure for the left side.



105 Baldwinville Rd
Winchendon, MA 01475
978-297-2977
www.woodcraft-cfm.com