Rev 08/2012

WOODCRAFT Technologies, Inc.


Installation Instructions
60-0149RIB Crank Cover Protector



1) Attach the skid plate to the Woodcraft cover by bolting it from the inside.

IMPORTANT - USE **BLUE THREADLOCKING COMPOUND** ON THE THREE SKID PLATE MOUNTING BOLTS. Coat the threads completely and allow the threadlocking compound to fully set before use.

2) Install the Woodcraft cover using the included mounting hardware in the 3 locations shown above. Place the 6x50mm screw in hole number 3, the shorter 6x35mm bolts go in holes 1 and 2. Torque for these mounting bolts is about 7 ft-lbs.

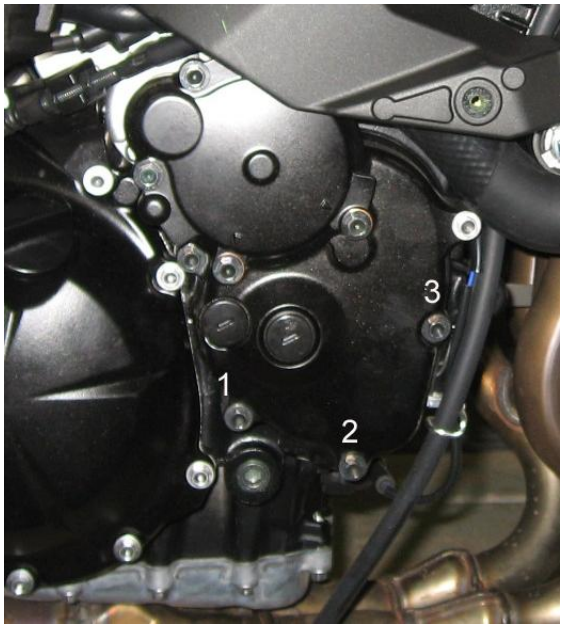

3) Start the motorcycle and inspect for any leaks before riding.

WARNING

Installation of Woodcraft Billet Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.