
WOODCRAFT Technologies, Inc.

Installation Instructions
60-0341LCB Stator Cover Protector



1) Attach the skid plate to the Woodcraft cover by bolting it from the inside. If there are washers included with your skid plate hardware, place them under the heads of the bolts before installation.

IMPORTANT - USE **BLUE THREADLOCKING COMPOUND** ON THE THREE SKID PLATE MOUNTING BOLTS. Coat the threads completely and allow the threadlocking compound to fully set before use.

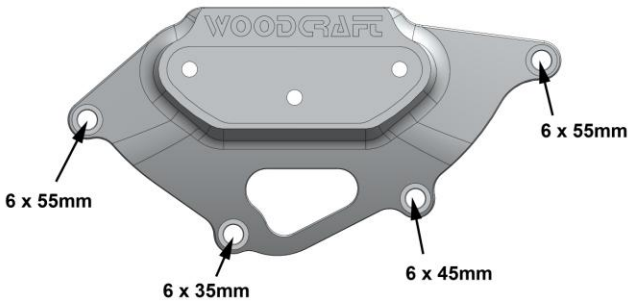

2) The 60-2500 rubber pad should be adhered to the back side of the cover.

3) Install the Woodcraft cover using the included mounting hardware in the 4 locations shown above. Torque for these mounting bolts is about 7 ft-lbs.

4) Start the motorcycle and inspect for any leaks before riding.

2017+CBR1000 Only: This cover requires slight trimming of the bodywork to fit. On the right side of the cover, there is a small lip on the bodywork that hits the cover. This small section should be trimmed with a Dremel Tool cut off wheel and then sanded smooth with a drum sanding attachment.



WARNING

Installation of Woodcraft Billet Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.