
Rev 05/2015

WOODCRAFT Technologies, Inc.

Installation Instructions
60-0454LB Stator Cover

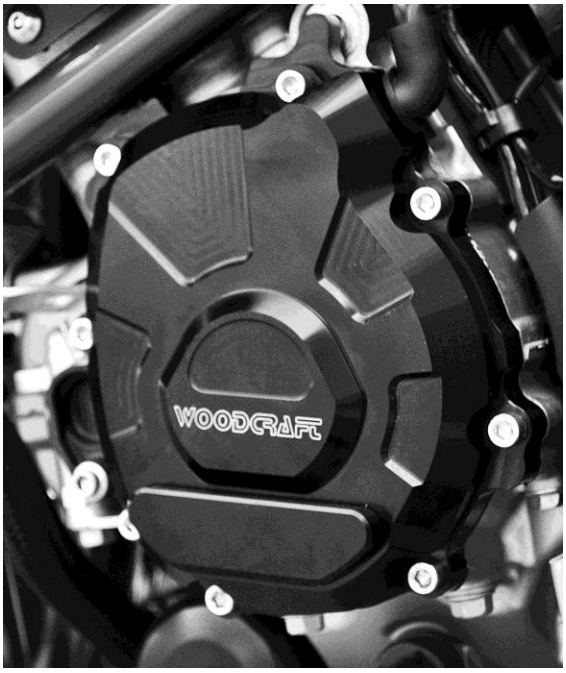

1) Remove the OEM cover from the motor and unbolt the stator assembly

2) Attach the skid plate to the Woodcraft cover by bolting it from the inside.

IMPORTANT - USE BLUE THREADLOCKING COMPOUND ON THE THREE SKID PLATE MOUNTING BOLTS. Coat the threads completely and allow the threadlocking compound to fully set before use.

3) Attach the stator, pickup and wire retainer using the OEM hardware to the Woodcraft cover. Be sure that the retainer does not contact the rotor before assembly. **IMPORTANT - USE BLUE THREADLOCKING COMPOUND ON THE STATOR & RETAINER MOUNTING BOLTS**

4) Completely clean the engine gasket surface

5) Install the Woodcraft cover with a new gasket, using the supplied socket cap hardware.. These gaskets do not require any sealant. The bolts should be torqued to about 7 ft-lbs.

6) Run the motorcycle and check thoroughly for leaks before operation.

WARNING

Installation of Woodcraft Billet Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.