
60-0742LB 2021+ Aprilia RSV4 Stator Cover Protector

Installation Instructions

NOTE: The OEM plastic engine cover needs to be removed prior to installing the Woodcraft cover protector

1) Remove the OEM Plastic protective cover.

2) Remove the three bolts from the bottom of the LHS OEM cover.

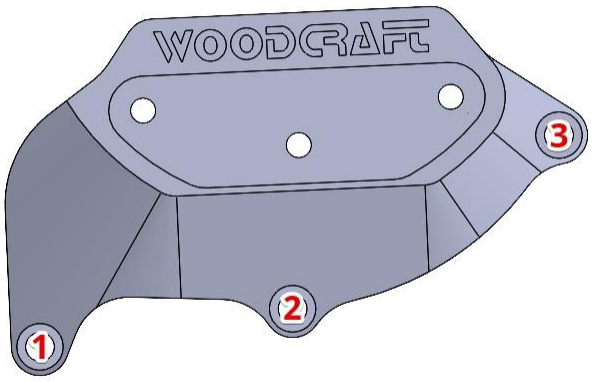

3) Attach the skid plate to the Woodcraft cover by bolting it from the inside.

IMPORTANT - USE BLUE THREADLOCKING COMPOUND ON THE THREE SKID PLATE MOUNTING BOLTS.

4) Install the Woodcraft cover with the included mounting hardware and torque to OEM specifications.

- #1 Hole – M6 x 35mm
- #2 Hole – M6 x 45mm
- #3 Hole – M6 x 50mm

5) Start the motorcycle and inspect for any leaks before riding.

WARNING

Installation of Woodcraft Billet Covers involve removal and reinstallation of certain factory components such as fasteners, stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.