
Rev 0226

Installation Instructions
60-0760LB Cover Protector

1) Attach the skid plate to the Woodcraft cover by bolting it from the inside using the 5mm flat head bolts. The 60-2500 rubber pad should also be adhered to the back side of the cover.

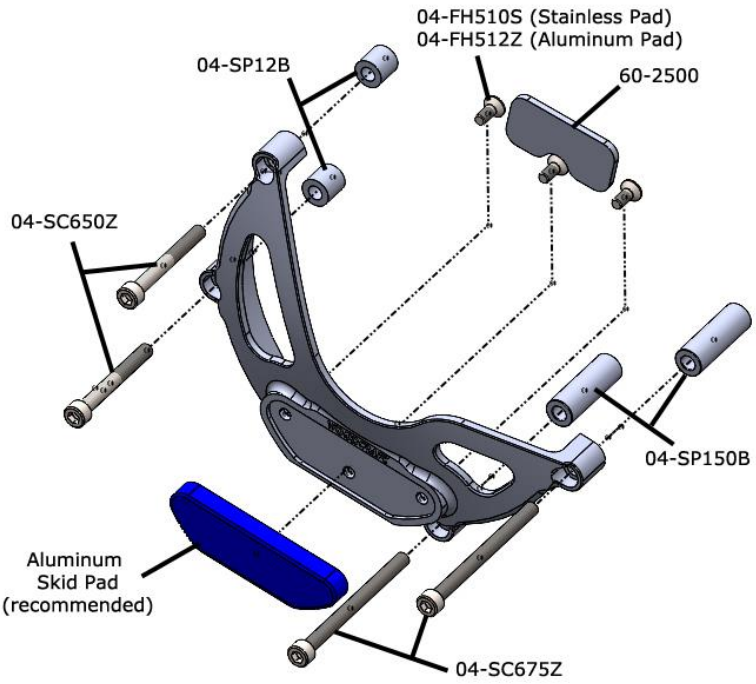

IMPORTANT – USE THREADLOCKING COMPOUND ON THE THREE SKID PLATE MOUNTING BOLTS. Coat the threads completely and allow the threadlocking compound to fully set before use.

2) Install the Woodcraft cover with a using the included mounting hardware in the 4 locations shown at the right. The spacers go between the cover and the engine at the locations shown in the diagram. Torque for all the main 6mm mounting bolts is about 7 ft-lbs, and we recommend using Blue Loctite on all 4 bolts.



3) Start the motorcycle and inspect for any leaks before riding.

WARNING
Installation of Woodcraft Billet Covers involve removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.