
WOODCRAFT Technologies, Inc.

Installation Instructions
60-0790WPC Cover Protector

1) Attach the skid plate to the Woodcraft cover by bolting it from the inside.

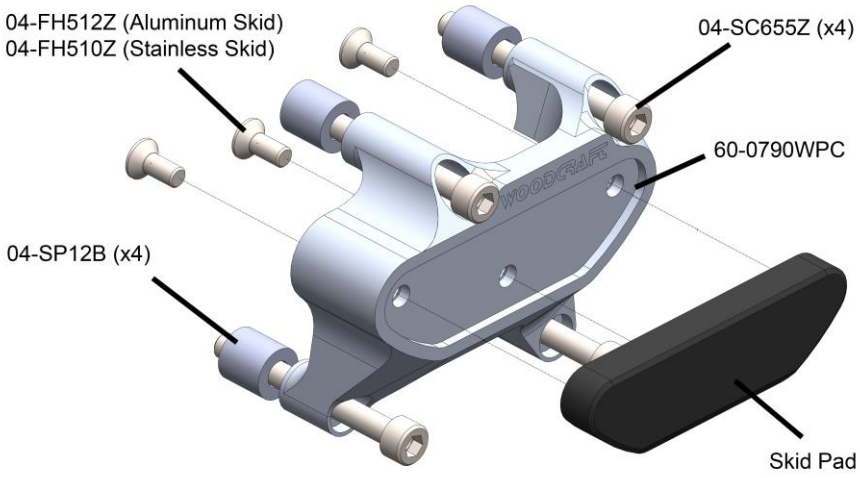

IMPORTANT - USE **THREADLOCKING COMPOUND** ON THE THREE SKID PLATE MOUNTING BOLTS

2) Drain the coolant from the motorcycle

3) Install the Woodcraft cover using the included mounting hardware and spacers in the 4 locations shown above. Torque for these mounting bolts is about 7 ft-lbs.



4) Refill the coolant and tighten the drain bolt.

4) Start the motorcycle and inspect for any leaks before riding.

WARNING

Installation of Woodcraft Billet Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.