
WOODCRAFT CFMOTORSPORTS
105 Baldwinville Rd
Winchendon, MA 01475
(978)297-2977
www.woodcraft-cfm.com

05-0610 Ducati 748/916/996/998 Rearset Instruction Sheet – Racing Use Only

1) Remove the stock rearsets, footpegs and associated hardware. All components that are re-used in this kit should be cleaned and inspected for damage before re-installation.


Brake Side Assembly Installation

1) Bolt the CFM footpeg to the bracket using the included 10mm hardware. Bolt the heel guard to the bracket using the included 6mm hardware. IMPORTANT - Secure all bolts with **BLUE LOCTITE**.
2) Bolt the bracket to the frame using the OEM hardware.
3) (Optional) Assemble the CFM brake pedal and bolt it to the frame using the OEM shouldered bolt and o-rings. Be sure to coat the sliding surface of the pedal with a quality waterproof grease. The OEM pedal return spring and brake light switch are used. IMPORTANT - Secure all the bolts with **BLUE LOCTITE**.
4) Adjust the brake pedal to your desired height using the OEM adjustments.

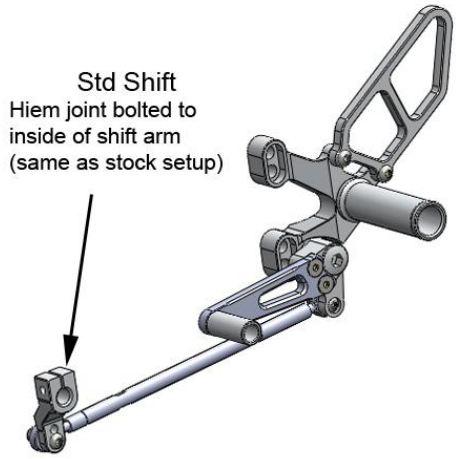

Shift Side Assembly Installation

1) Bolt the CFM footpeg to the bracket using the included 10mm hardware. Bolt the heel guard to the bracket using the included 6mm hardware. IMPORTANT - Secure all bolts with **BLUE LOCTITE**.
2) Bolt the CFM left bracket to the frame using the OEM hardware.
3) Attach the CFM shift lever to the bracket using the OEM hardware, be sure to generously apply quality waterproof grease to the sliding surface of the bolt to ensure smooth lever operation. IMPORTANT - Secure bolt with **BLUE LOCTITE**.
4) Attach the OEM Ducati shift rod, hiem joint and linkage to the CFM shift lever using the OEM hardware.
5) **For GP shifting,** unbolt the gear change actuator (the piece bolted to the motor) and remove the hiem joint. Flip the actuator 180 degrees and re-attach the hiem joint using the included bolt and spacer as shown in the GP shift drawing on the right.
6) Adjust the pedal to a comfortable height using the OEM shift rod. Lock the rod in place using the OEM adjustment nuts.

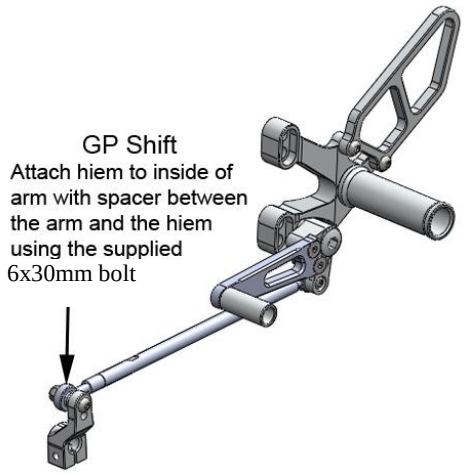

BE SURE THAT ALL COMPONENTS OPERATE AND RETURN FREELY BEFORE USE
If you have any questions regarding installation, please feel free to contact us.

IMPORTANT

Installation and use of this product will change the response of the motorcycle to rider control inputs. Failure of the rider to adapt to these changes may result in a loss of control, and serious injury or death. Improper installation and/or failure to comply with all warnings and instructions may cause a loss of control and serious injury or death. DO NOT INSTALL OR USE THIS PRODUCT IF YOU ARE UNABLE TO DO SO IN COMPLIANCE WITH ALL INSTRUCTIONS AND WARNINGS. SEEK THE ASSISTANCE OF A TRAINED PROFESSIONAL TECHNICIAN. Installation of this product releases the Woodcraft Technologies, Inc. from all liabilities as to the use of this product. The user recognizes that any alteration or modification to any motorcycle may increase the risk of injury or accident and may also render the motorcycle illegal for public road use