WOODCRAFT Technologies Inc




Installation Instructions

27-4382B Superbike Lifter Hooks

IMPORTANT - USE BLUE LOCTITE on all bolts



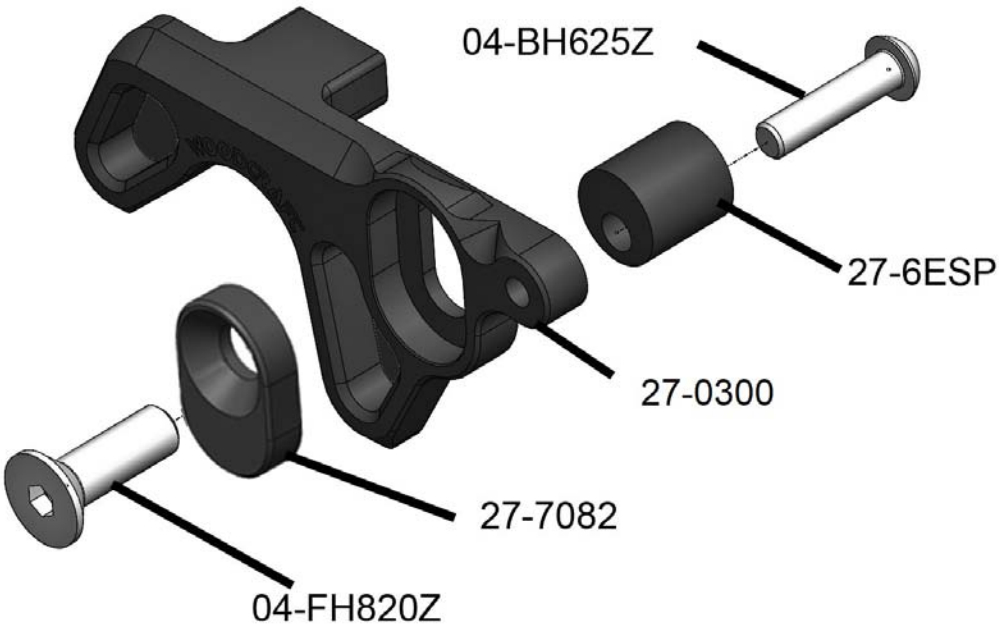

Without Optional Slider Pucks

1) Place the 27-7082 insert, in the up position, into the 27-0300 main hook. The hole should be oriented so that it is closer to the swingarm. Bolt the hook to the 8mm spool receiver on the swing arm using the 8x20mm flat head countersunk bolt.

2) Attach the eccentric spacer 27-6ESP to the back side of the hook using the supplied 6x25mm button head bolt. As you tighten the bolt, **both** the eccentric spacer and the machined stop on the back side of the hook should be seated firmly against the swingarm.

WARNING: Improper installation and/or failure to comply with all warnings and instructions may cause a loss of control and serious injury or death. The motorcycle should be run and thoroughly inspected before use. DO NOT INSTALL OR USE THIS PRODUCT IF YOU ARE UNABLE TO DO SO IN COMPLIANCE WITH ALL INSTRUCTIONS AND WARNINGS. ALWAYS SEEK THE ASSISTANCE OF A TRAINED PROFESSIONAL TECHNICIAN.