WOODCRAFT Technologies Inc



Installation Instructions

27-4383B Superbike Lifter Hooks

IMPORTANT - USE BLUE LOCTITE on all bolts

Without Optional Slider Pucks




1) Place the 27-7083 insert, in the up position, into the 27-0300 main hook. The hole should be oriented so that it is closer to the swingarm. Bolt the hook to the 10mm spool receiver on the swingarm using the 10x25mm flat head countersunk bolt.

2) Attach the eccentric spacer 27-6ESP to the back side of the hook using the supplied 6x25mm button head bolt. As you tighten the bolt, **both** the eccentric spacer and the machined stop on the back side of the hook should be seated firmly against the swingarm.

With Optional Slider Puck Set (27-5199)

1) Bolt the hook to the swingarm using the 10x25mm button head bolt. The bolt should first pass through the 27-1095H hex spacer and then through the 27-7083 Insert, with hole in the up position.

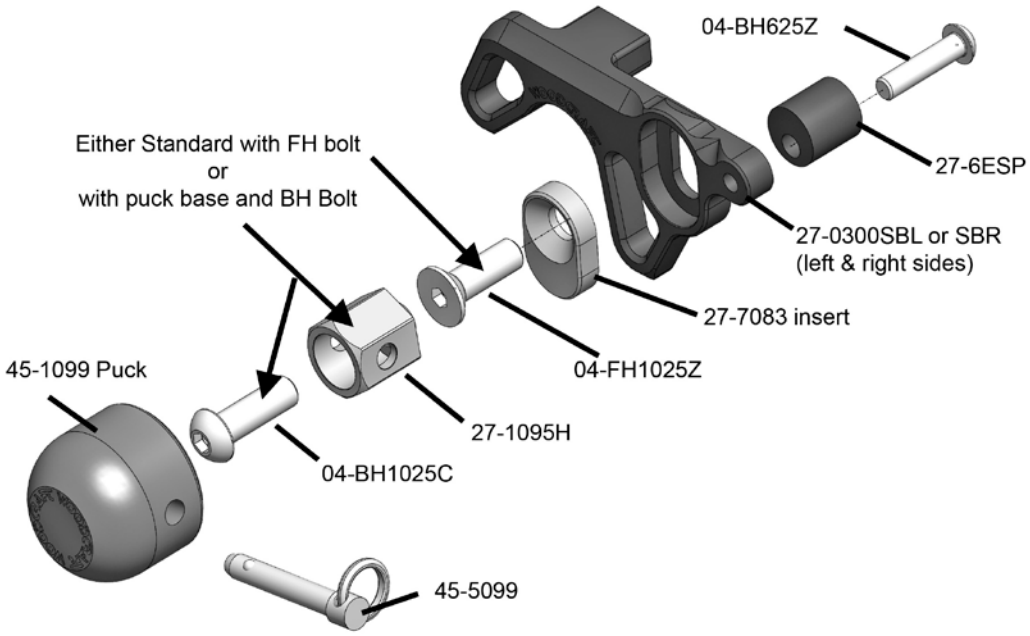

2) Attach the eccentric spacer to the back side of the hook as described in step 2 above.

3) Install the 45-1099 puck on the hex spacer using the 45-5099 quick release pin.

WARNING: Improper installation and/or failure to comply with all warnings and instructions may cause a loss of control and serious injury or death. The motorcycle should be run and thoroughly inspected before use. DO NOT INSTALL OR USE THIS PRODUCT IF YOU ARE UNABLE TO DO SO IN COMPLIANCE WITH ALL INSTRUCTIONS AND WARNINGS. ALWAYS SEEK THE ASSISTANCE OF A TRAINED PROFESSIONAL TECHNICIAN.