
WOODCRAFT Technologies, Inc.

IN 50-0407
Installation Instructions
Yamaha FZ-07

1) Remove your OEM motor mount bolt on the left side. These sliders will use the most forward engine mount bolts that pass through the frame and thread into the cylinder head - shown in the photo at the right.

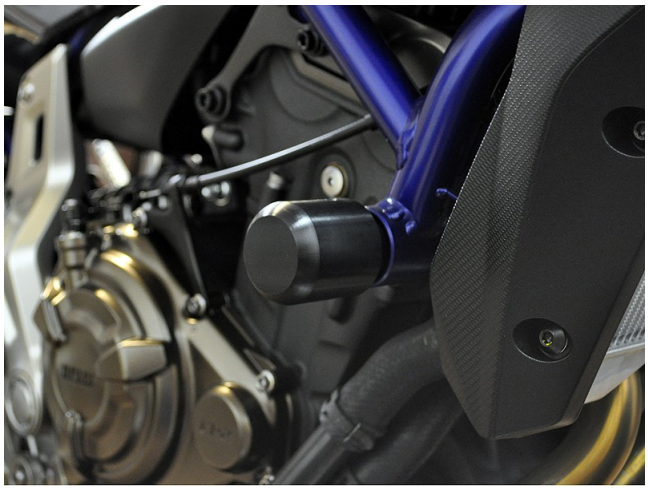

2) Attach the slider bases to the motorcycle using the 12mm bolts provided, threading them in place of your motor mount bolts. Each side uses the same 12x40mm bolt and base.

WARNING: Since motor mount bolts are fine thread steel bolts, it is easy to cross thread them and damage the threads. Always start the first few turns by hand before using the ratchet on the bolt.

3) If dry, torque the12mm engine mount bolt to 55 ft-lbs. If using anti sieze on the bolts then the torque on the bolts should be 45 ft-lbs.

4) Slide the plastic slider over the top of the base and secure it in place using the 8 mm countersunk bolt provided. The bolt passes first through the non threaded hole and then screws into the threaded hole on the far side of the base. The plastic is undersized on the far side of the slider to act as a locknut for the bolt.

5) Repeat this process on the right side of the motorcycle.

NOTE: 2026 R7 Requires curring of the bodywork on the RHS with all puck choices

105 Baldwinville Rd.Winchendon, MA01475
978-297-2977

WARNING: Improper installation and/or failure to comply with all warnings and instructions may cause a loss of control and serious injury or death. The motorcycle should be run and thoroughly inspected before use. DO NOT INSTALL OR USE THIS PRODUCT IF YOU ARE UNABLE TO DO SO IN COMPLIANCE WITH ALL INSTRUCTIONS AND WARNINGS. SEEK THE ASSISTANCE OF A TRAINED PROFESSIONAL TECHNICIAN.