
Installation Instructions

60-0232RC Suzuki GSX-8 R/S Water Pump Cover Protector

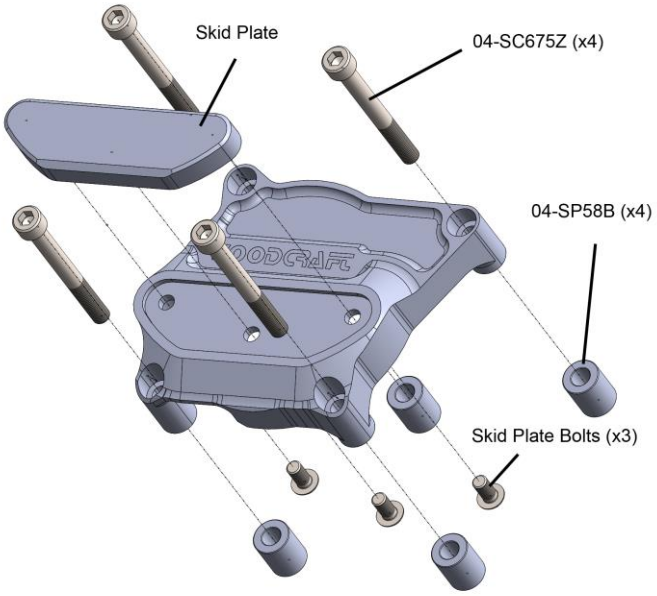

1) Attach the skid plate to the Woodcraft cover by bolting it from the inside. IMPORTANT - USE **BLUE THREADLOCKING COMPOUND** ON THE THREE SKID PLATE MOUNTING BOLTS. Coat the threads completely and allow the threadlocking compound to fully set before use.

2) Install the Woodcraft cover using the included mounting hardware. The location is shown below. Be sure to place the 04-SP58B spacers between the cover and the water pump.

Torque for these mounting bolts is about 7 ft-lbs.

3) Start the motorcycle and inspect for any leaks before riding.



WARNING

Installation of Woodcraft Billet Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.