IN 50-0632 Rev 0422
Installation Instructions
Ducati Monster 937



Completely install the sliders one side at a time. Never loosen both motor mount bolts at the same time or your engine may shift and you will have to jack it back in place to ensure proper alignment to re-install.


WARNING: Since motor mount bolts are fine thread steel bolts, it is easy to cross thread them and damage the threads. Always start the first few turns by hand before using the ratchet on the bolt. We recommend using a small amount of anti-seize paste on the supplied bolts.

Recommended torque – If dry torque to 90NM.
If lubricated torque to 70-NM.

2) Attach the right side slider base to the forward most engine mount using the 12 x 80mm bolt provided, (same base for both sides) threading this assembly in place of your OEM motor mount bolts.

3) Attach the left slider base and spacer using the 12x125mm bolt provided.

4) Slide the plastic slider puck over the top of the base and secure it in place using the 8 mm countersunk bolt provided. The bolt passes first through the non-threaded hole and then screws into the threaded hole on the opposite side of the base. The plastic is slightly undersized on the far side of the puck to act as a locknut for the bolt.

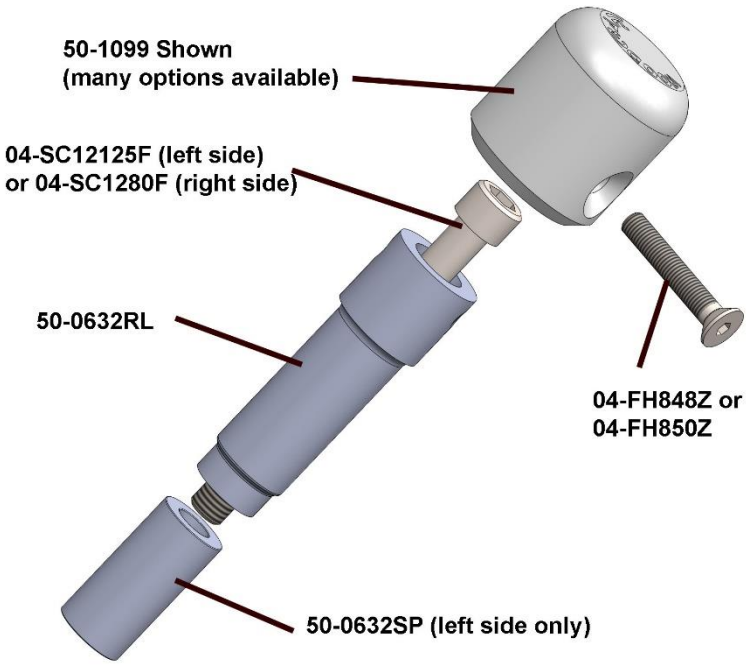

Woodcraft Technologies
105 Baldwinville Rd. Winchendon, MA 01475
978-297-2977

WARNING: Improper installation and/or failure to comply with all warnings and instructions may cause a loss of control and serious injury or death. The motorcycle should be run and thoroughly inspected before use. DO NOT INSTALL OR USE THIS PRODUCT IF YOU ARE UNABLE TO DO SO IN COMPLIANCE WITH ALL INSTRUCTIONS AND WARNINGS. SEEK THE ASSISTANCE OF A TRAINED PROFESSIONAL TECHNICIAN.