
Bike	KTM Adventure 790 - Euro 5+	**Part No.**	RKT-98
Year	2023-Current	**Fit Kit**	Z039.10671
Notes	Where not supplied use original fittings. Do NOT remove OE Gasket.	**dB Killer**	SCEXDBK23 - (Type V)

Estimated Fitting Time: 60 Minutes

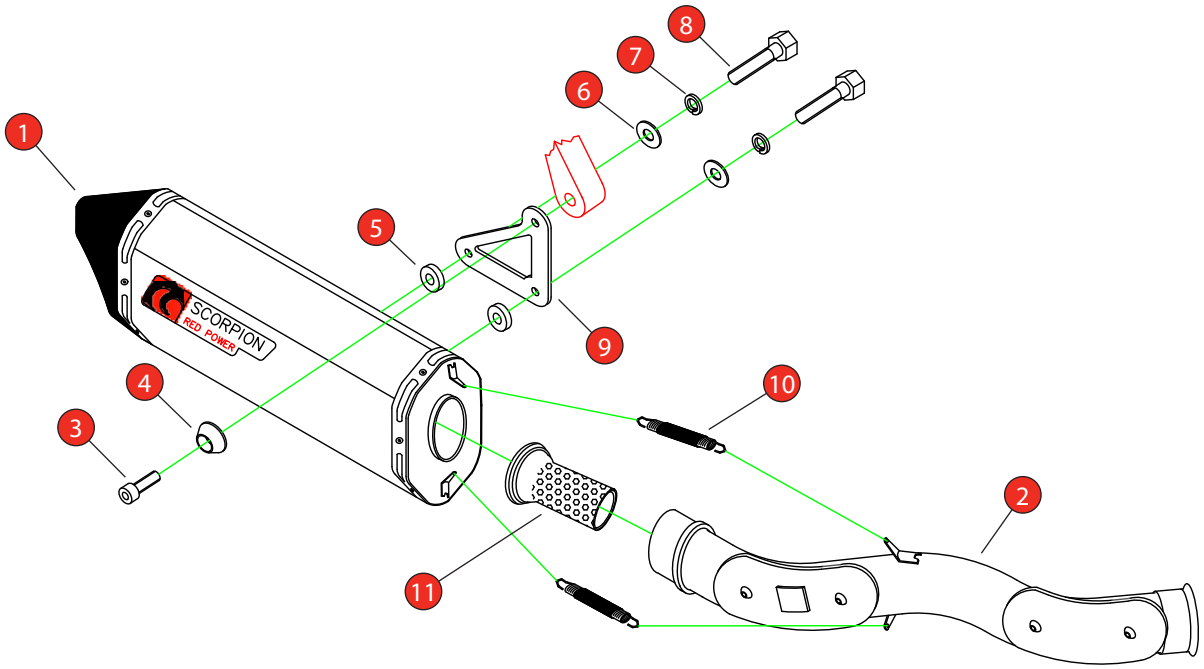


NO.	PART NO.	DESCRIPTION	QTY
1	RSC481	Serket Parallel Silencer	1
2	CP1070	Connecting Pipe With Carbon Fibre Heat Shields (Z028.20406 & Z028.20412)	1
Fit Kit - Z039.10671			
3	Z017.10072	M8 x 20mm Cap Head Bolt	1
4	Z026.20068B	Black Alloy Bolt Finisher	1
5	Z026.20049	M8 x 5mm Alloy Spacer	2
6	Z017.10825	M8 x 25mm Washer	2
7	Z017.10064	M8 Spring Washer	2
8	Z017.10048	M8 x 25mm Hex Head Bolt	2
9	Z015.31445	Mounting Bracket	1
10	Z028.10030	Rubber Coated Spring	2
11	Z028.20188	Closed End Flute	1

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	28/10/2026
ISSUE	01
AUTHORISED	G O'Shea

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.


Bike	KTM Adventure 790 - Euro 5+	**Part No.**	RKT-98
Year	2023-Current	**Fit Kit**	Z039.10671
Notes	Where not supplied use original fittings. Do NOT remove OE Gasket.	**dB Killer**	SCEXDBK23 - (Type V)

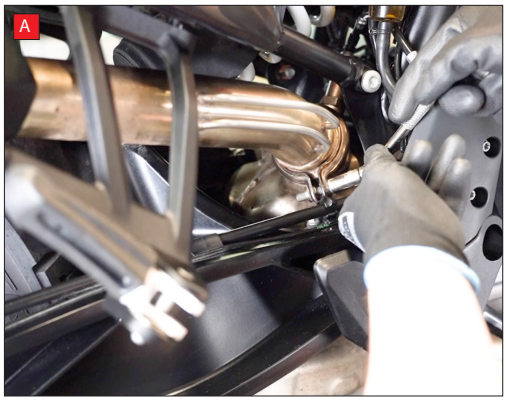








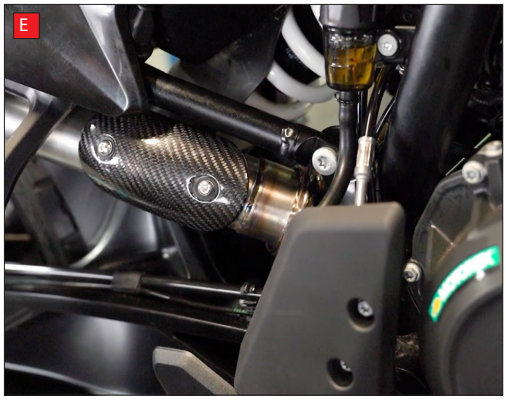



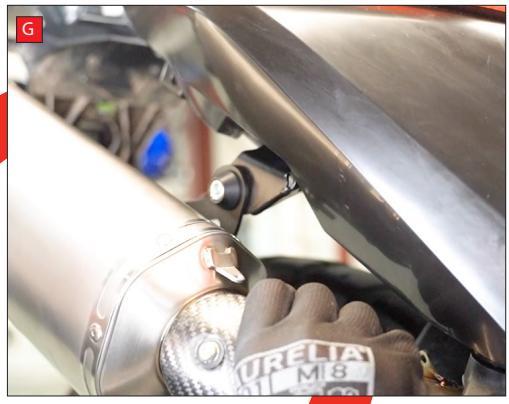



NOTE: If fitting Catalyst Removal Pipe at the same time, follow the fitting instructions for that instead.

A) Remove the exhaust clamp for the silencer.

B) Support the weight of the rear silencer, then remove the mounting bolt.

C) Carefully remove the silencer.

D) Place the silencer face down on a soft clean surface, then install the mounting bracket using the supplied spacers and mounting hardware. Leave loose for now you will fully tighten in a later step.


E) Fit the Scorpion link pipe to the catalyst using the original clamp. Leave loose for now, you will fully tighten in a later step.


F) If using the flute for a quieter system, place it into the Scorpion connecting pipe. Slide the Scorpion silencer on to the connecting pipe and roughly align with the mounting point.

G) Loosely secure in place with the supplied hardware. You will fully tighten in a later step.

H) Fit the springs between the spring hoops on the silencer and connecting pipe.

Bike	KTM Adventure 790 - Euro 5+	**Part No.**	RKT-98
Year	2023-Current	**Fit Kit**	Z039.10671
Notes	Where not supplied use original fittings. Do NOT remove OE Gasket.	**dB Killer**	SCEXDBK23 - (Type V)

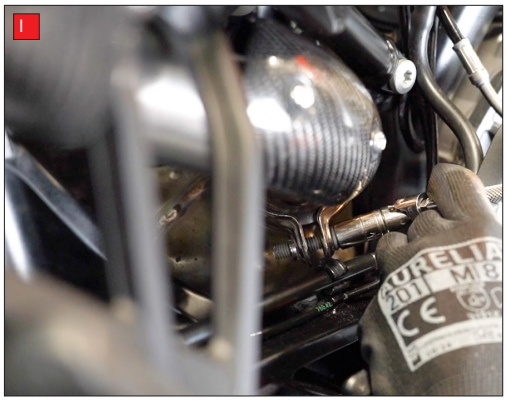

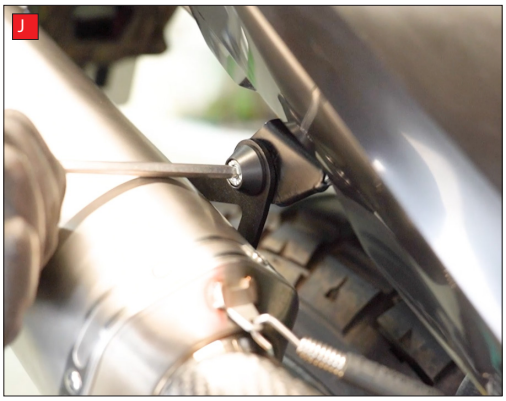

I) Adjust the system if necessary, then fully tighten the clamp.

J) Fully tighten the silencer mounting bolt and the bracket mounting bolts.

When fitted take bike for a short ride to ensure all functions are correct. When bike & exhaust are cool enough check all nuts and bolts are still secure.

Bike	KTM Adventure 790 - Euro 5+	**Part No.**	RKT-98
Year	2023-Current	**Fit Kit**	Z039.10671
Notes	Where not supplied use original fittings. Do NOT remove OE Gasket.	**dB Killer**	SCEXDBK23 - (Type V)

Estimated Fitting Time: 60 Minutes



Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.