
| | | | |
|---|---|---|---|
| **Bike** | BMW S1000 RR | **Part No.** | RBM-74 |
| **Year** | 2015-16 | **Fit Kit** | Z039.10558 |
| **Notes** | Where not supplied use original fittings | **dB Killer** | SCEXDBK24 - (Type W) |

Estimated Fitting Time: 60 Minutes

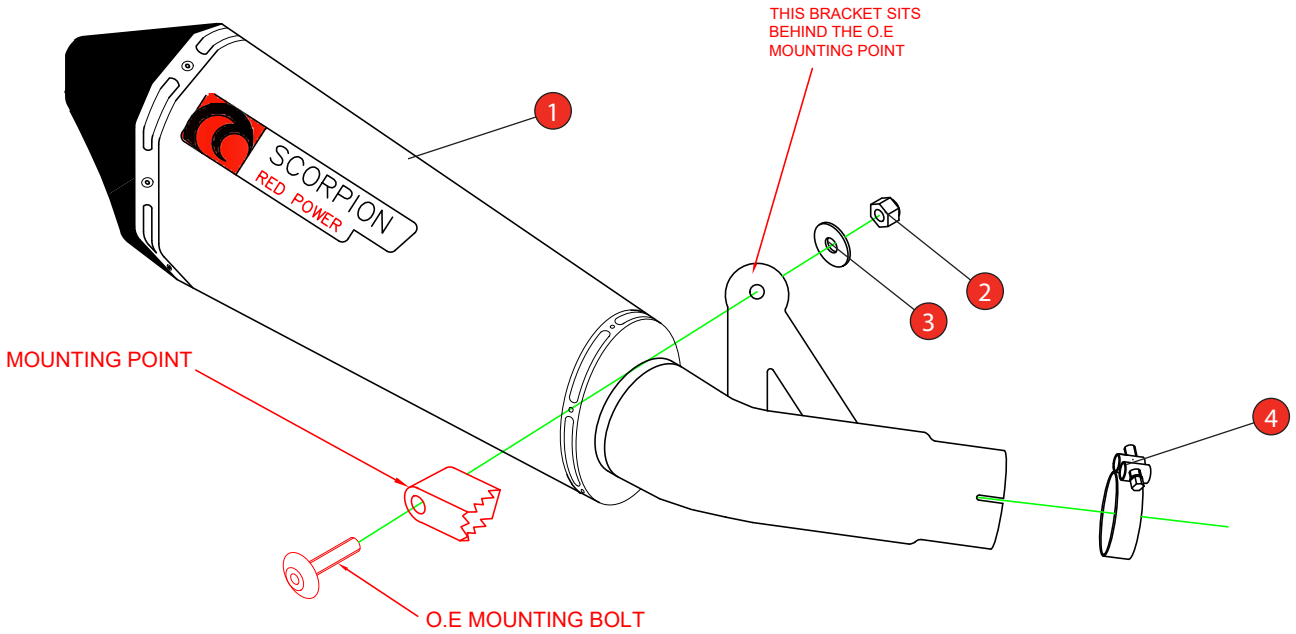


| NO. | PART NO. | DESCRIPTION | QTY |
|---|---|---|---|
| 1 | RSC343 | Serket Taper Silencer with intergrated CP869 | 1 |
| **Fit Kit - Z039.10558** | | | |
| 2 | Z017.10062 | M8 Nyloc Nut | 1 |
| 3 | Z017.10831 | M8 x 17mm Washer | 1 |
| 4 | Z016.10001 | 59 - 63mm Clamp | 1 |

| | |
|---|---|
| CLASSIFICATION | Closed Circuit Product |
| HOMOLOGATED | NO |
| DATE | 28/03/2022 |
| ISSUE | 06 |
| AUTHORISED | S Shipley |

| | | | |
|---|---|---|---|
| **Bike** | BMW S1000 RR | **Part No.** | RBM-74 |
| **Year** | 2015-2016 | **Fit Kit** | Z039.10050 |
| **Notes** | Where not supplied use original fittings | **dB Killer** | SCEXDBK24 (Type W) |

Estimated Fitting Time: 60 Minutes



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.