
Bike	Triumph Street Triple	**Part No.**	PTR-87
Year	2017-2019	**Fit Kit**	Z039.10684
Notes	Where not supplied use original fittings Fits to S, R & RS models.	**dB Killer**	SCEXDBK47 - (Type PB)

Estimated Fitting Time: 60 Minutes

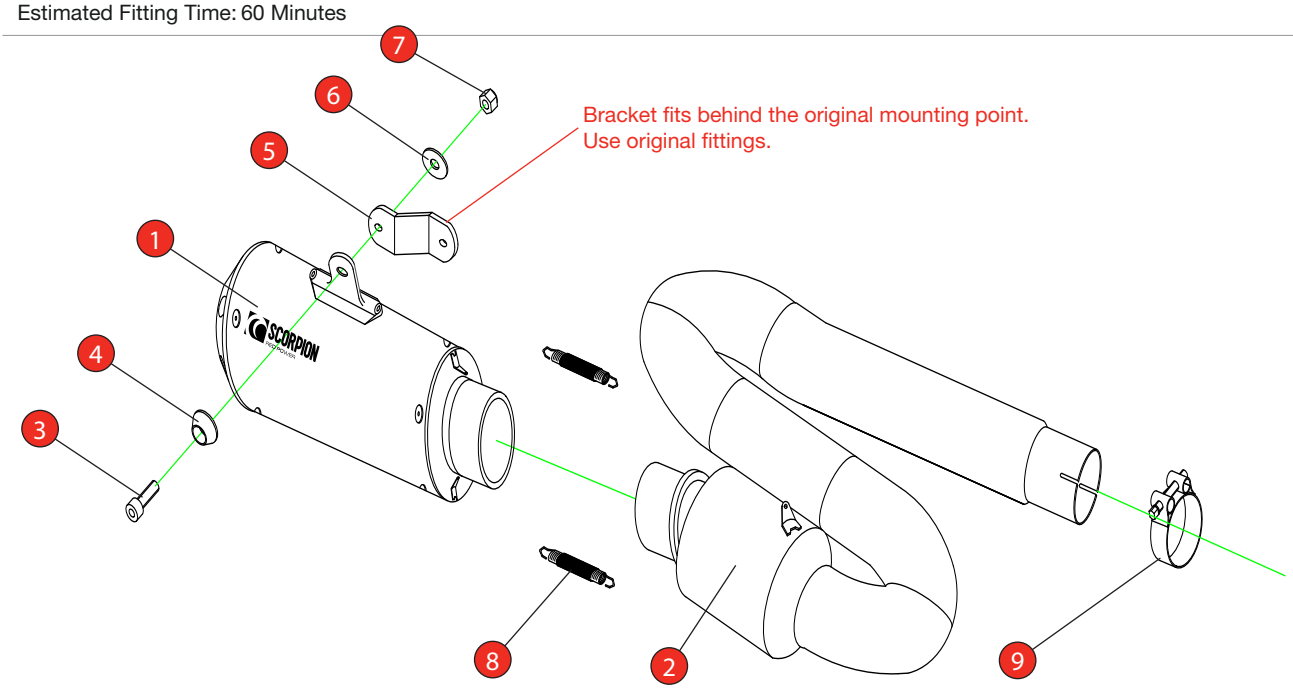

NO.	PART NO.	DESCRIPTION	QTY
1	PSC459	Red Power Silencer	1
2	CP954	Connecting Pipe	1
Fit Kit - Z039.10684			
3	Z017.10073	M8 x 25mm Cap Head Bolt	1
4	Z026.20068	Alloy Bolt Finisher	1
5	Z015.31419	Mounting Bracket	1
6	Z017.10825	M8 x 25mm Washer	1
7	Z017.10062	M8 Nyloc Nut	1
8	Z028.10030	Rubber Coated Spring	2
9	Z016.10008	43-47mm Clamp	1


CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	No
DATE	12/04/2023
ISSUE	05
AUTHORISED	S Shipley


Bike	Triumph Street Triple	**Part No.**	PTR-87
Year	2017-2019	**Fit Kit**	Z039.10684
Notes	Where not supplied use original fittings Fits to S, R & RS models.	**dB Killer**	SCEXDBK47 - (Type PB)









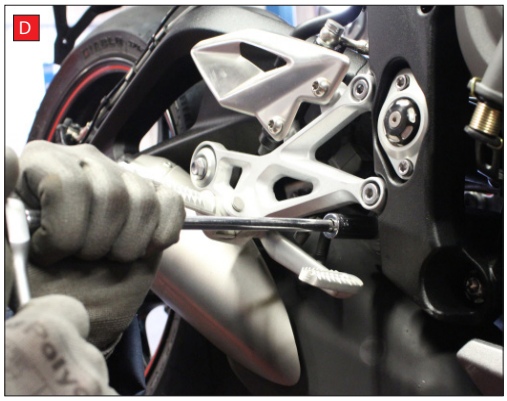

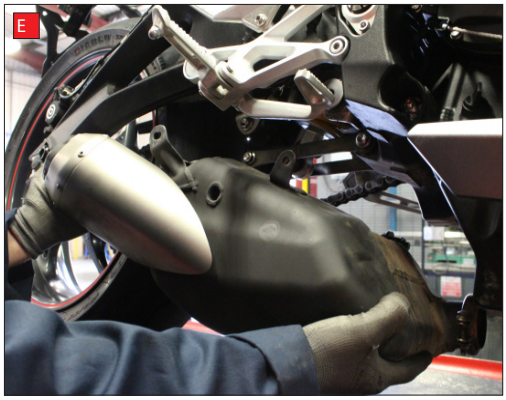



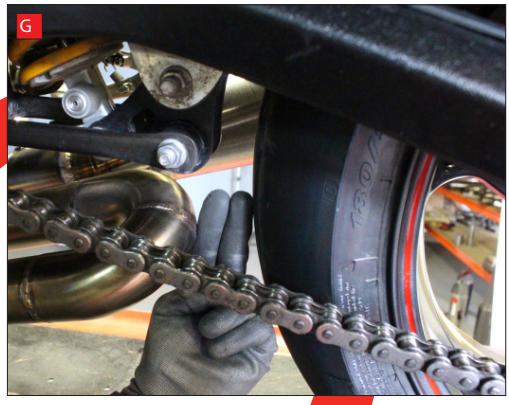

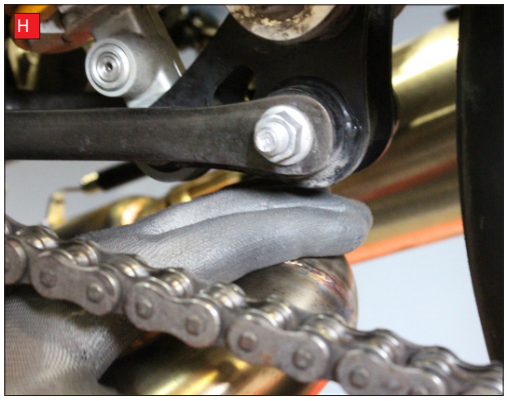

Note: Retain all original parts and fittings. Instructions show a Serket taper silencer, instructions are the same when fitting an Red Power .

A) Unscrew heat shield bolt and remove heat shield.

B) Undo original clamp and remove it from the bike.

C) Unscrew the original silencer mounting bolt.


D) Unscrew the second original silencer mounting bolt.

E) Remove the silencer from the bike.
NOTE: If the gasket stays on the cat, remove it now as it's not needed when fitting the Scorpion slip-on system.


F) Following the diagram above, loosely fit the Scorpion system.

G) Check the clearance between the pipework and the rear tyre, this requires a minimum spacing 45mm.

Bike	Triumph Street Triple	**Part No.**	PTR-87
Year	2017-2019	**Fit Kit**	Z039.10684
Notes	Where not supplied use original fittings Fits to S, R & RS models.	**dB Killer**	SCEXDBK47 - (Type PB)

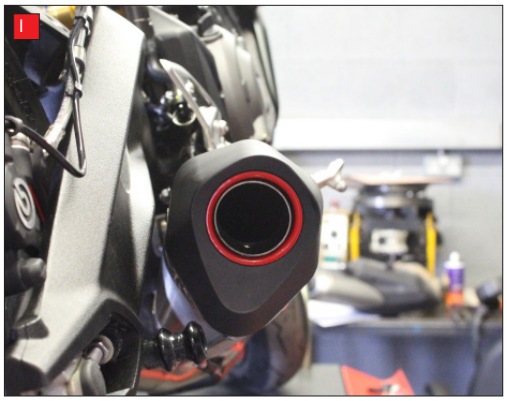



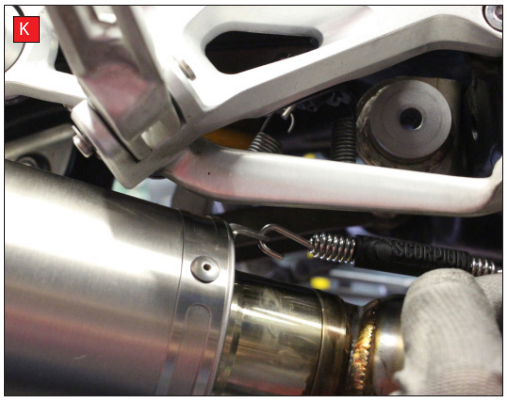



I) Looking from the rear of the bike ensure the silencer does not protrude past the foot peg.

J) Check the clearance between the silencer and the swing arm, this requires a minimum spacing of 15mm.

K) Check the clearance of between the silencer and brake lever. Press brake lever down to ensure it does not touch the silencer at any point during use.

L) Once happy with the alignment of your exhaust, tighten all fittings. Take bike for a short ride. Upon return allow the system to cool and check all fittings are still secure.

Bike	Triumph Street Triple	**Part No.**	PTR-87
Year	2017-2019	**Fit Kit**	Z039.10684
Notes	Where not supplied use original fittings Fits to S, R & RS models.	**dB Killer**	SCEXDBK47 - (Type PB)

Estimated Fitting Time: 60 Minutes



Note: Retain all original parts and fittings.

A) Unscrew heat shield bolt and remove heat shield.

B) Undo original clamp and remove it from the bike.

C) Unscrew the original silencer mounting bolt.

D) Unscrew the second original silencer mounting bolt.

E) Remove the silencer from the bike.

F) Following the diagram above, loosely fit the Scorpion system.

G) Check the clearance between the pipework and the rear tyre, this requires a minimum spacing 45mm.

H) Check the clearance between the pipework and the suspension linkage, this requires a spacing of at

Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.