
Bike	Kawasaki Z900 Euro 5+	Part No.	PKA-152
Year	2025 - Current	Fit Kits	Z039.10600
Notes	Use standard fittings where not supplied Remove standard gasket if fitted.	dB Killer	SCEXDBK46 (Type PA)

Estimated Fitting Time: 60 Minutes

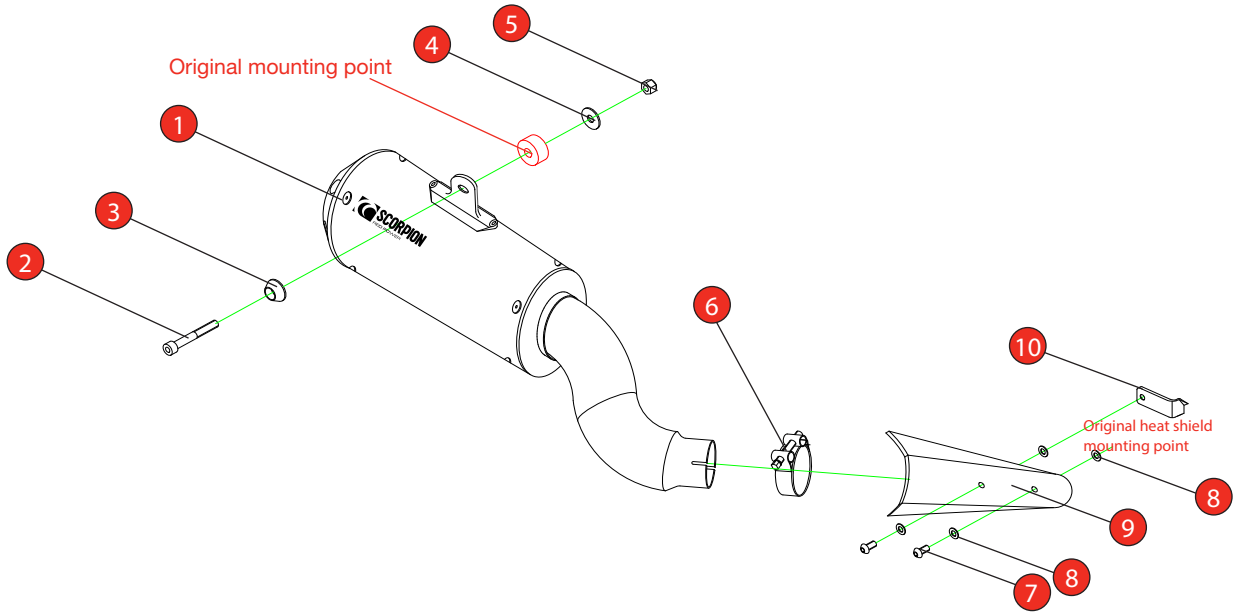


NO.	PART NO.	DESCRIPTION	QTY
1	PSC470	Red Power Silencer With Integrated CP1053	1
Fit Kit - Z039.10600			
2	Z017.10080	M8 x 60mm Cap Head Bolt	1
3	Z026.20068	Alloy Bolt Finisher	1
4	Z017.10825	M8 x 25mm Washer	1
5	Z017.10062	M8 Nyloc Nut	1
6	Z016.10002	51-55mm Clamp	1
7	Z017.10608	M6 x 16mm Button Head Bolt	2
8	Z017.12781	Black Fibre Washer	4
9	Z028.20350	Black Composite Heat Shield	1
10	Z015.31310	Heat Shield Support Bracket	1


NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	No
DATE	04/09/2025
ISSUE	00
AUTHORISED	G O'Shea

https://youtu.be/-nwHXJ2WxYE?si=StBkCJjuiSi1xEVa

Bike	Kawasaki Z900 Euro 5+	Part No.	PKA-152
Year	2025 - Current	Fit Kits	Z039.10600
Notes	Use standard fittings where not supplied Remove standard gasket if fitted.	dB Killer	SCEXDBK46 (Type PA)

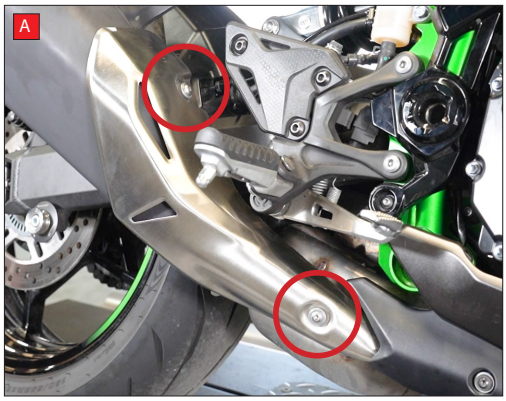

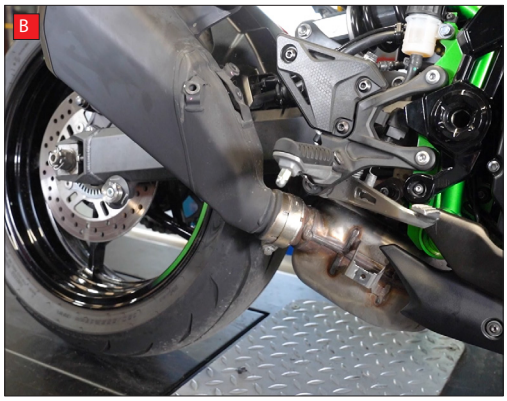

A) Remove the 2 bolts from the exhaust cover.

B) Remove the exhaust cover.





C) Loosen the exhaust clamp.


D) Remove the silencer mounting bolt.

E) Carefully remove the silencer from the bike.

F) If the gasket remains on the bike rather than coming away with the silencer, remove it now as it's not required with the Scorpion exhaust.

G) Slide the Scorpion silencer along with the supplied clamp onto the original exhaust.

H) Align the mounting bracket with the mounting point on the frame and loosely secure in place with the supplied hardware. You'll fully tighten in a later step.

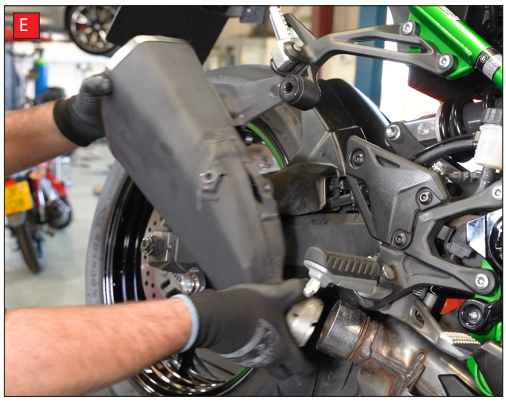









Bike	Kawasaki Z900 Euro 5+	Part No.	PKA-152
Year	2025 - Current	Fit Kits	Z039.10600
Notes	Use standard fittings where not supplied Remove standard gasket if fitted.	dB Killer	SCEXDBK46 (Type PA)

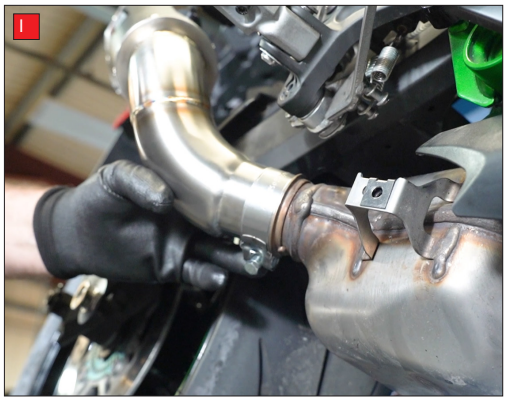



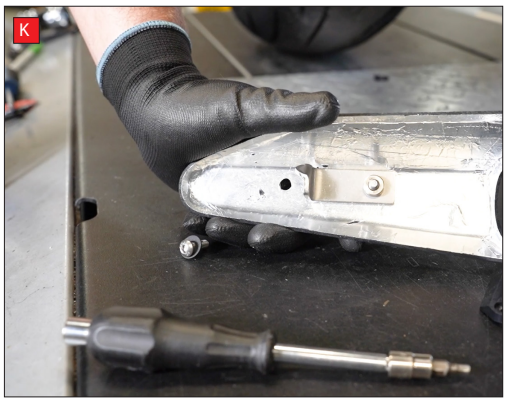



I) Fully tighten the clamp.

J) Fully tighten the silencer mounting bolt.

K) Attach the cover bracket to the exhaust cover using the supplied hardware as per the diagram on the first page of the fitting instructions.

L) Attach the cover to the mounting point on the original exhaust and fully tighten both bolts.

When fitted take bike for a short ride to ensure all functions are correct. When bike & exhaust are cool enough check all nuts and bolts are still secure.

Bike	Kawasaki Z900 Euro 5+	Part No.	PKA-152
Year	2025 - Current	Fit Kits	Z039.10600
Notes	Use standard fittings where not supplied Remove standard gasket if fitted.	dB Killer	SCEXDBK46 (Type PA)
Estimated Fitting Time: 60 Minutes			



Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.