
Box: PLOCK 1

BIKE	SUZUKI SV 650 HIGH LEVEL	PART NO.	ESI - 75
YEAR	2003	FIT KITS	OVAL Z039.11082 // ROUND Z039.10082
NOTES	Item 7 required to re-fit OE exhaust system	DB-Killer	SCEXDBK12 - (Type B)

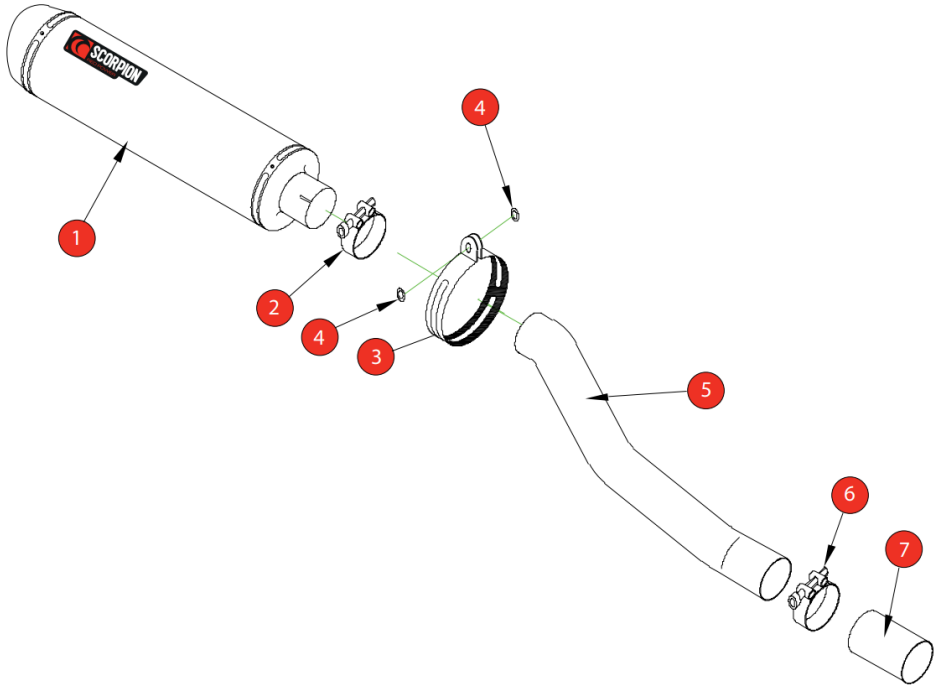

1 450mm Silencer ESC 94
2 51-55mm Band Clamp (Z016.10002)
3 Composite Silencer Strap (R-Z038.10089)(O-Z038.10088)
4 2 x M8 x 25mm Washers (Z017.10825)
5 Connecting Pipe CP 325
6 55-59mm Band Clamp (Z016.10004)
7 Re-connecting Sleeve CP327
8 Original Silencer Cut Diagram

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	27/10/2026
ISSUE	15
AUTHORISED	G O'Shea

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.