
SCORPION RED POWER

SCORPION // FITTING INSTRUCTIONS

HAND BUILT IN ENGLAND

Bike	Honda CB125 R	**Part No.**	PHA-183-SYS
Year	2018-2020	**Fit Kit**	Z039.10646
Notes	Where not supplied use original fittings. Use OE gasket and nuts for the header pipe only.	**dB Killer**	SCEXDBK49 - (TYPE PD)

Estimated Fitting Time: 60 Minutes

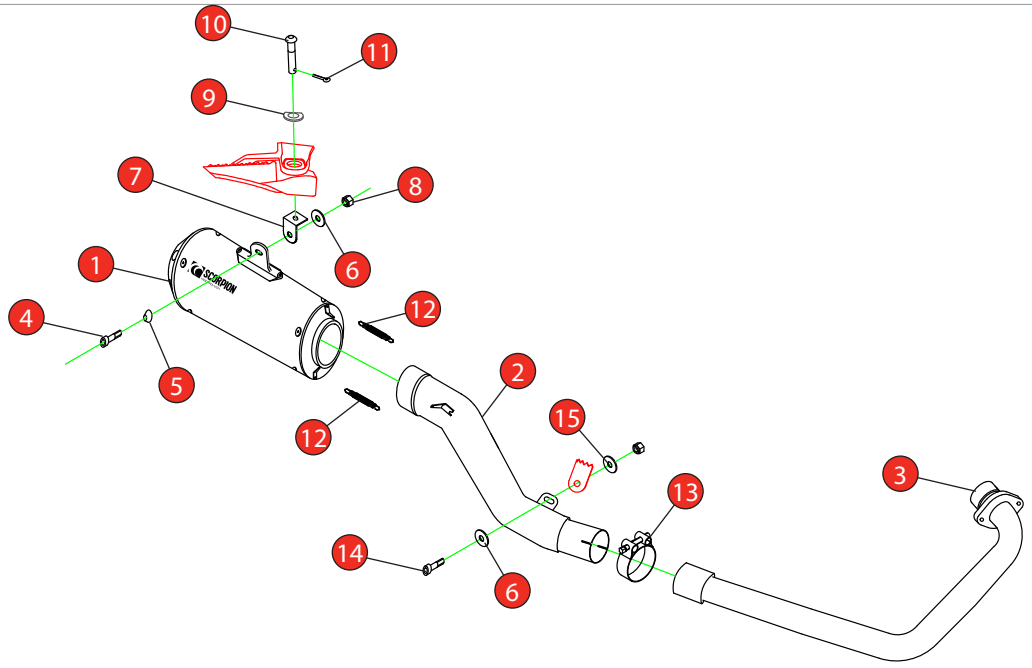

NO.	PART NO.	DESCRIPTION	QTY
1	PSC445	Red Power Silencer	1
2	CP1026	Connecting Pipe	1
3	CP1024	Header Pipe	1
Fit Kit - Z039.10646			
4	Z017.10073	M8 x 25mm Caphead Bolt	1
5	Z026.20068	Alloy Bolt Finisher	1
6	Z017.10825	M8 x 25mm Washer	2
7	Z015.31052	Mounting Bracket	1
8	Z017.10062	M8 Nyloc Nut	2
9	Z007.31617	3mm Spacer	1
10	Z017.10009	M8 Button Head with Split Pin Hole	1
11	Z017.10008	3mm Split Pin	1
12	Z028.10030	Rubber Coated Springs	2
13	Z016.10007	40-43mm Band Clamp	1
14	Z017.10076	M8 x 40mm Caphead Bolt	1
15	Z017.10831	M8 x 17mm Washer	1

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	19/12/2023
ISSUE	04
AUTHORISED	S Shipley


NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

STAY CONNECTED TO RED POWER.

SCORPION RED POWER

Bike	Honda CB125 R	**Part No.**	PHA-183-SYS
Year	2018-2020	**Fit Kit**	Z039.10646
Notes	Where not supplied use original fittings. Use OE gasket and nuts for the header pipe only.	**dB Killer**	SCEXDBK49 - (TYPE PD)



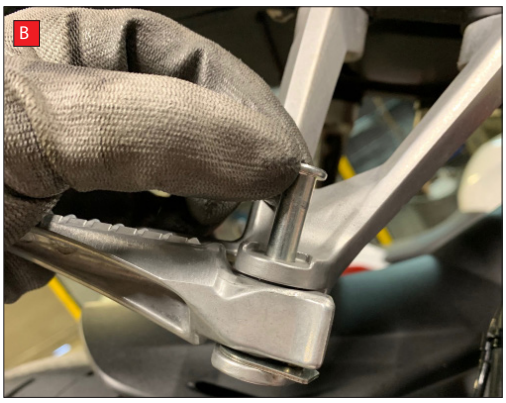

A Remove the Split Pin from the right side pillion foot rest.

B Remove the Footpeg Pin from the pillion foot rest.

C Place the Spacer labelled 9 in the previous diagram on the Pillion foot rest.


D Insert the M8 Button Head Bolt labelled 10 through the Spacer and the Footrest Assembly. Secure the the Bracket leballed 7 and firmly screw into the bracket.





E Secure item 10 with the Split Pin 7 ensuring to fold in opposite directions.

F Securely attach the silencer to the rest of the system and then bolting the Silencer to the Bracket.

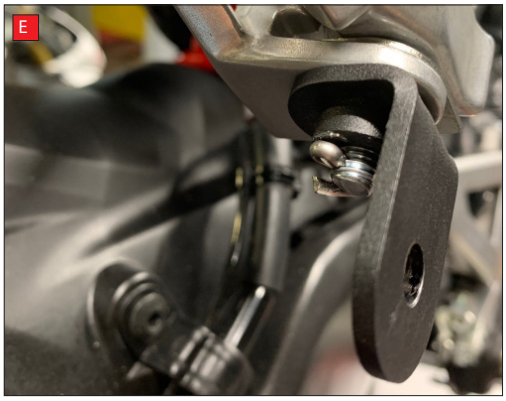



Bike	Honda CB125 R	**Part No.**	PHA-183-SYS
Year	2018-2020	**Fit Kit**	Z039.10646
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK49 - (TYPE PD)

Estimated Fitting Time: 60 Minutes



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.

Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.