
Bike	CFMOTO 450 MT	**Part No.**	RCF-51
Year	2024-Current	**Fit Kit**	Z039.10774
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK23 - (TYPE V)

Estimated Fitting Time: 1 Hour

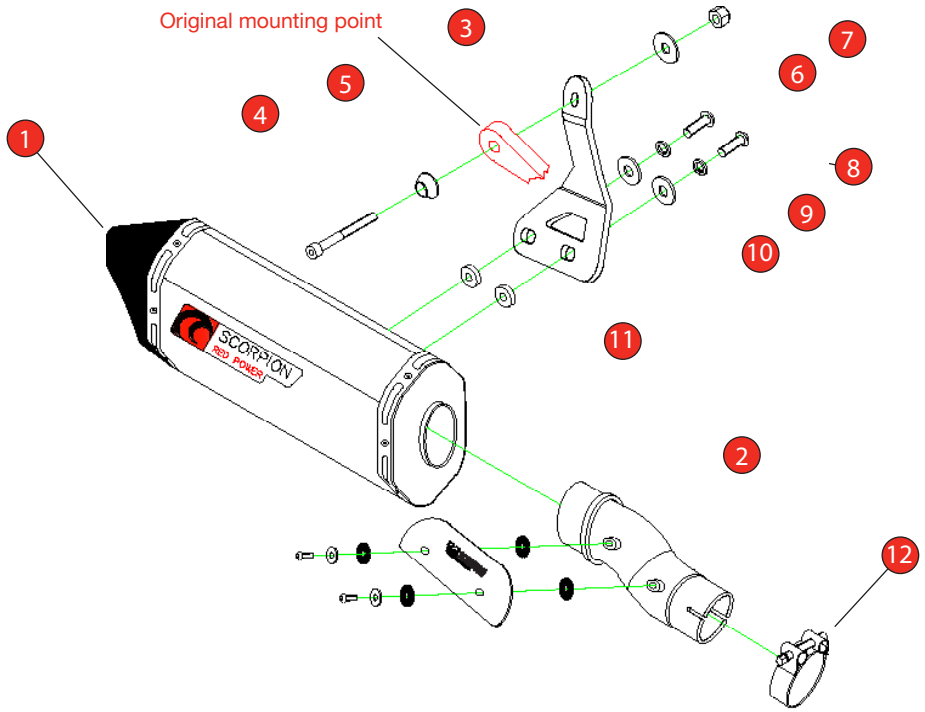


NO.	PART NO.	DESCRIPTION	QTY
1	RSC555	Serket Parallel Silencer	1
2	CP1239	Connecting Pipe (Including Heat Shield Assembly)	1
Fit Kit - Z039.10774			
3	Z015.31615	Silencer Mounting Bracket	1
4	Z017.10078	M8 x 50mm Caphead Screw	1
5	Z026.20068	Alloy Bolt Finisher	1
6	Z017.10825	M8 x 25mm Washer	1
7	Z017.10062	M8 Nyloc Nut	1
8	Z017.10110	M8 x 25mm Button Head Screw	2
9	Z017.10064	M8 Spring Washer	2
10	Z017.10831	M8 x 17mm Washer	2
11	Z026.20049	5mm Spacer	2
12	Z016.10008	Clamp - 43-47mm	1

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	27/10/2026
ISSUE	01
AUTHORISED	G O'Shea

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Bike	CFMOTO 450 MT	**Part No.**	RCF-51
Year	2024-Current	**Fit Kit**	Z039.10774
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK23 - (TYPE V)



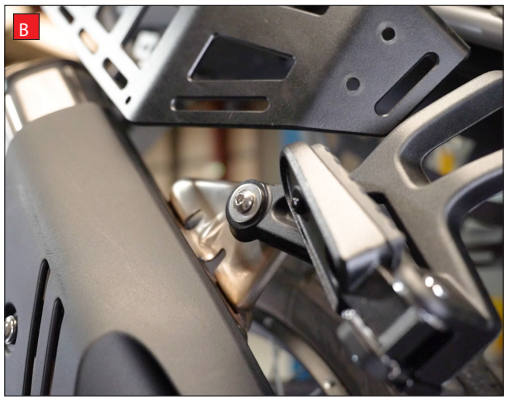


A) Loosen the exhaust clamp at the silencer.

B) Supporting the weight of the silencer, remove the mounting bolt.

C) Carefully remove the silencer.



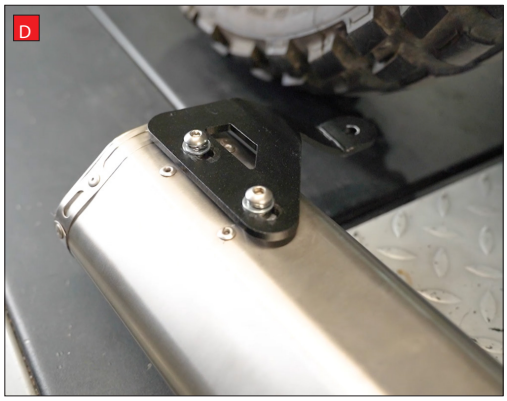

D) Place the Scorpion silencer face down on a soft, clean surface and install the mounting bracket as per the diagram on the first page of the instructions. Leave the bolts loose for now to allow adjustment. You will fully tighten in a later step.

E) Slide the Scorpion connecting pipe, along with the clamp, on to the original exhaust.





F) Slide the Scorpion silencer onto the connecting pipe and roughly align with the mounting point.


G) Secure in place with the supplied hardware. Leave loose for now, you will fully tighten in a later step.


H) Fully tighten the exhaust clamp.





Bike	CFMOTO 450 MT	**Part No.**	RCF-51
Year	2024-Current	**Fit Kit**	Z039.10774
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK23 - (TYPE V)

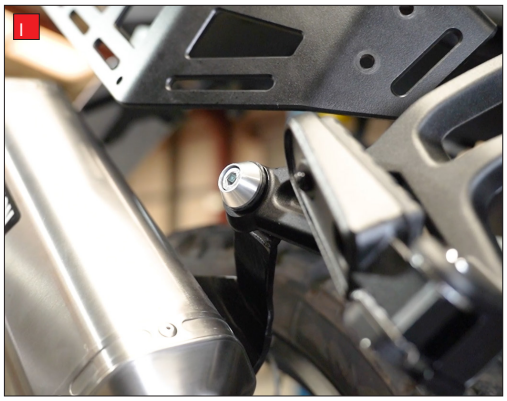

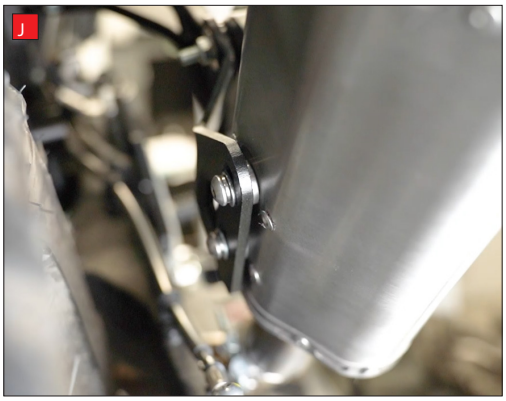

I) Fully tighten the silencer mounting bolt.

J) Fully tighten the silencer bracket bolts.

When fitted take bike for a short ride to ensure all functions are correct. When bike & exhaust are cool enough check all nuts and bolts are still secure.

Bike	CFMOTO 450 MT	**Part No.**	RCF-51
Year	2024-Current	**Fit Kit**	Z039.10774
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK23 - (TYPE V)

Estimated Fitting Time: 1 Hour



Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.