
Box: PLOCK 1

BIKE	SUZUKI SV650 (Carbine)	PART NO.	ESI-88
YEAR	2000-15	FIT KITS	OVAL Z039.11082
NOTES	Item 7 required to reifit OE exhaust system	DB-Killer	SCEXDBK12 - (Type B)

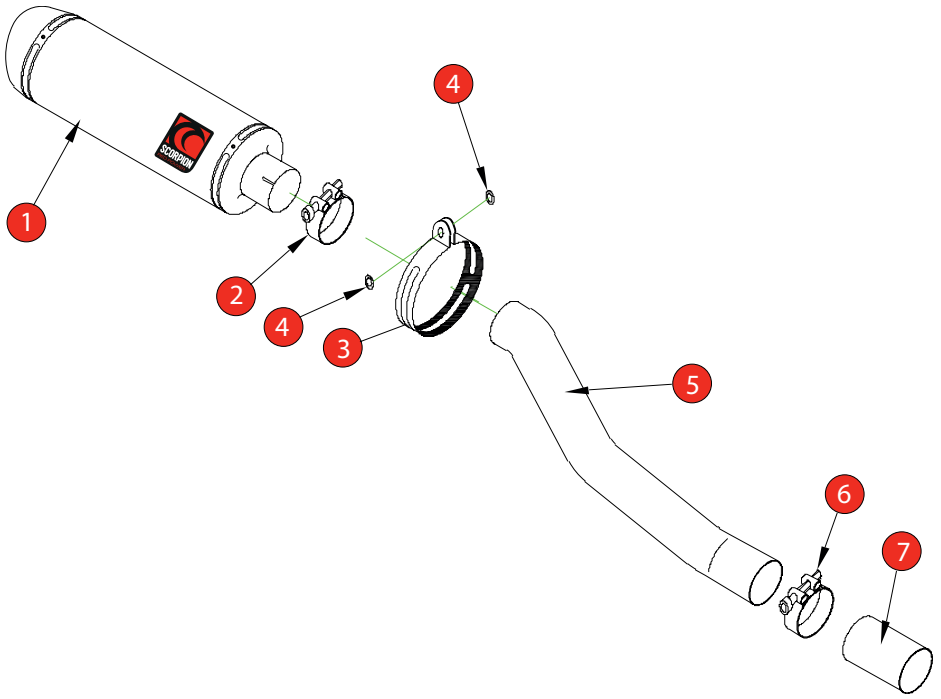


1	225mm Silencer ESC 114
2	51-55mm Band Clamp (Z016.10002)
3	Composite silencer strap (Z038.10088)
4	2 x M8 x 25mm Washers (Z017.10825)
5	Connecting Pipe CP 325
6	55-59mm Band Clamp (Z016.10004)
7	Re-connecting Sleeve CP 327

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	No
ISSUE NO.	16
DATE	05/03/2025
AUTHORISED	S Shipley
CHECKED	

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Box: PLOCK 1

BIKE	SUZUKI SV650 (Carbine)	PART NO.	ESI-88
YEAR	2000-15	FIT KITS	OVAL Z039.11082
NOTES	Item 7 required to reifit OE exhaust system	FEATURES	SCEXDBK12 - (Type B)

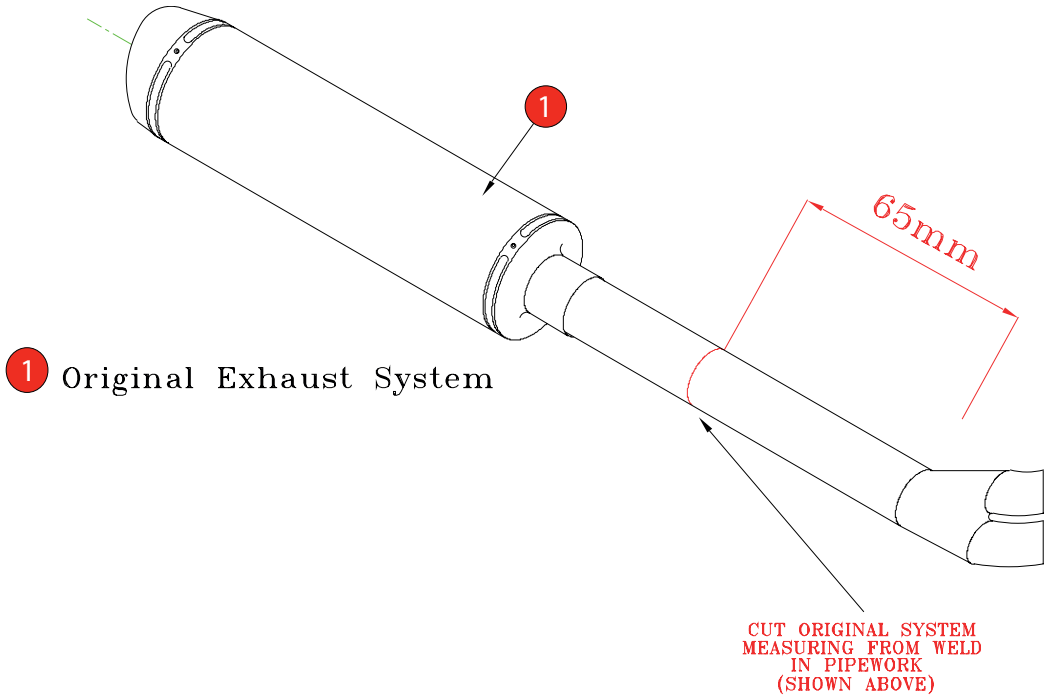

1. Use correct tools and check parts list
2. Saw off standard silencer 65mm back from weld in pipework,(as illustrated) Clean sawn edge.
3. Connector pipe CP-327 should only be used to re-fit std silencer if required.
4. Use rubber strap under silencer bracket to prevent damage to silencer
5. Use a small amount of silicone to seal joints
6. Tighten all fasteners and check that it is clear of all moving parts, & all original functions are working correctly
7. Ride for a short distance and re-tighten all fasteners

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.