
Box: PLOCK 1

BIKE	SUZUKI GSF1250 & FA Bandit	PART NO.	RSI-96
YEAR	2007-2015	FIT KITS	Z039.20407
NOTES	Use standard fittings where not supplied Remove standard gasket if fitted.	DB-Killer	SCEXDBK24 - (Type W)

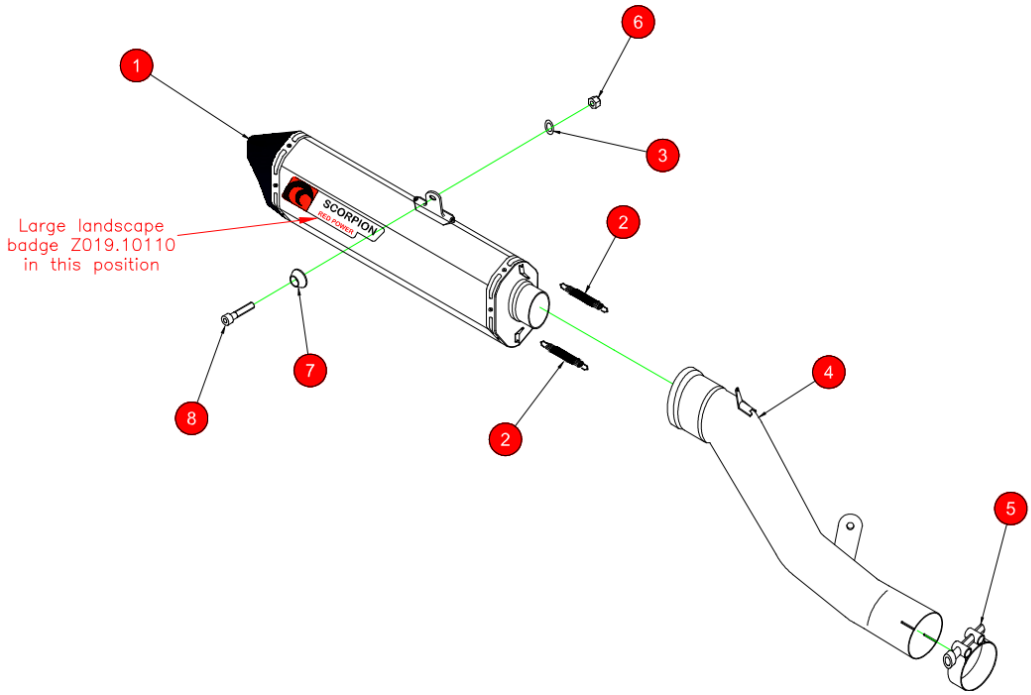

1 RSC-192 400mm Serket Silencer
2 2 x Rubber Coated Springs (Z028.10030)
3 M8x25mm Washer (Z017.10825)
4 Connecting Pipe CP626
5 55-59mm Band Clamp (Z016.10004)
6 M8 Nyloc nut (Z017.10062)
7 Alloy Bolt Finisher (Z026.20068)
8 M8x50 Cap Head Bolt (Z017.10079)
Bump Stop Kit (Z017.10010)

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	29/10/2026
ISSUE	10
AUTHORISED	G O'Shea

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.