
Bike	Kawasaki Ninja 7 Hybrid / Z7 Hybrid	**Part No.**	RKA-151
Year	2024-Current	**Fit Kit**	Z039.10770
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK23 - (Type V)

Estimated Fitting Time: 60 Minutes

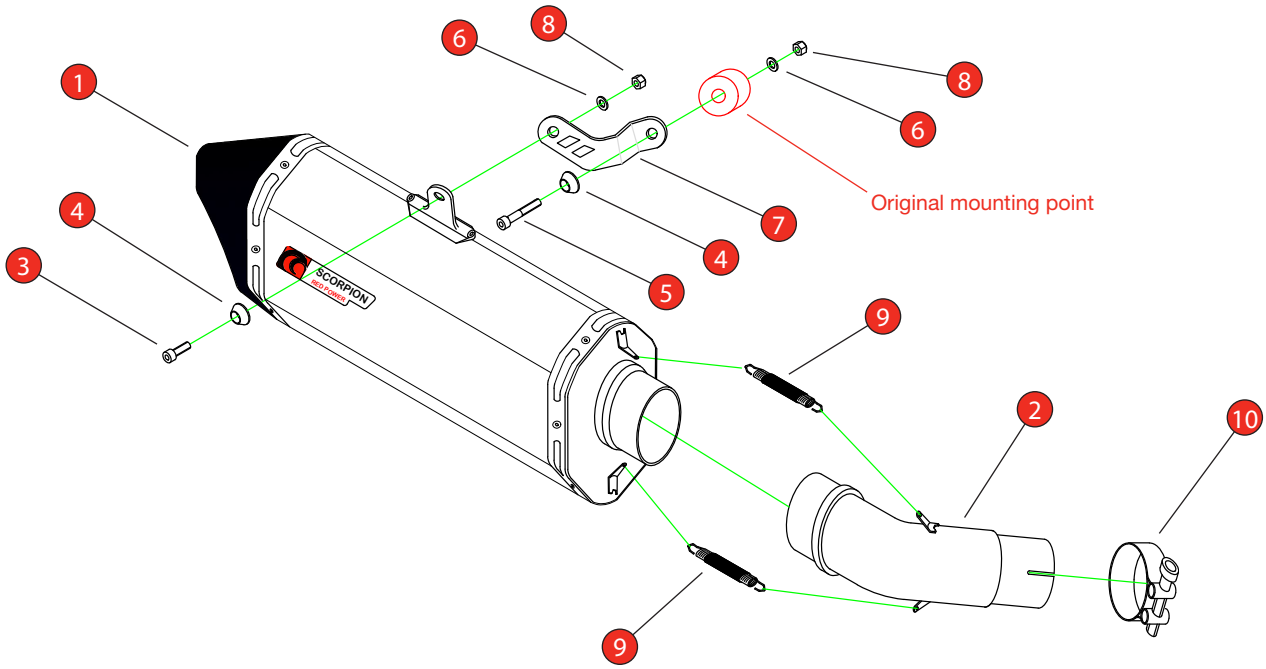


NO.	PART NO.	DESCRIPTION	QTY
1	RSC191	Serket Taper Silencer	1
2	CP1234	Connecting Pipe	1
Fit Kit - Z039.10631			
3	Z017.10073	M8 x 25mm Cap Head Bolt	1
4	Z026.20068	Alloy Bolt Finisher	2
5	Z017.10079	M8 x 55mm Cap Head Bolt	1
6	Z017.10831	M8 x 17mm Washer	2
7	Z015.31027	Mounting Bracket	1
8	Z017.10062	M8 Nyloc Nut	2
9	Z028.10030	Rubber Coated Spring	2
10	Z016.10008	43-47mm Clamp	1


CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	28/10/2026
ISSUE	01
AUTHORISED	G O'Shea

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.


Bike	Kawasaki Ninja 7 Hybrid / Z7 Hybrid	Part No.	RKA-151
Year	2024-Current	Fit Kits	Z039.10770
Notes	Where not supplied use original fittings	dB Killer	SCEXDBK23 - (Type V)



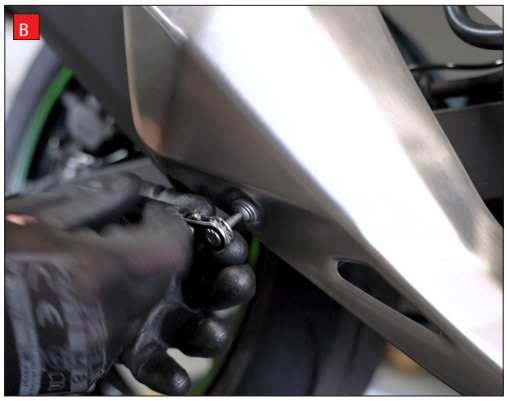

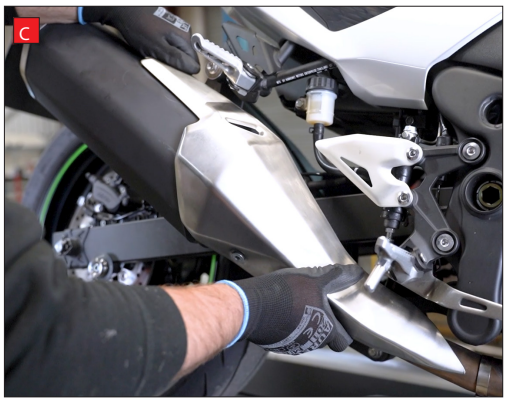



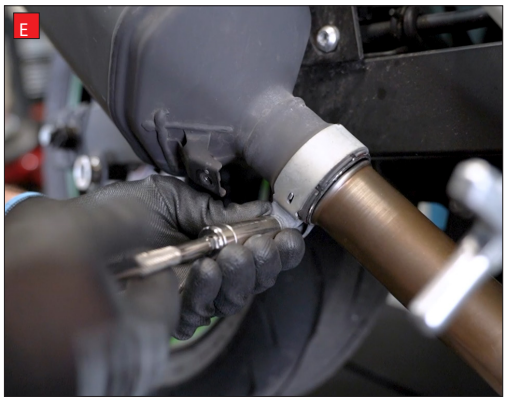







NOTE: Fitting instructions show Red Power silencer being fitted, the Serket silencer fits in the same way.

A) Loosen the clamp for the heat shield and slide down the exhaust.

B) Remove the bolt for the heat shield.

C) Slide the heat shield towards the front of the bike to remove it from the exhaust.

D) Remove the silencer mounting bolt.

E) Loosen the exhaust clamp.

F) Carefully remove the rear silencer.

G) Remove the clamp for the heat shield.

H) Slide the Scorpion connecting pipe and supplied clamp onto the original exhaust.

Bike	Kawasaki Ninja 7 Hybrid / Z7 Hybrid	Part No.	RKA-151
Year	2024-Current	Fit Kits	Z039.10770
Notes	Where not supplied use original fittings	dB Killer	SCEXDBK23 - (Type V)





I) Loosely fit the Scorpion mounting bracket to the mounting point on the frame. You will fully tighten this in a later step.

J) Slide the Scorpion silencer onto the connecting pipe and roughly align with the mounting bracket.

K) Loosely secure in place with the supplied hardware. You will fully tighten in a later step.

L) Fit the springs between the spring hoops.


M) Fully tighten the clamp.

N) Fully tighten the silencer to mounting bracket bolt.

O) Fully tighten the mounting bracket to frame bolt.

When fitted take bike for a short ride to ensure all functions are correct. When bike & exhaust are cool enough check all nuts and bolts are still secure.



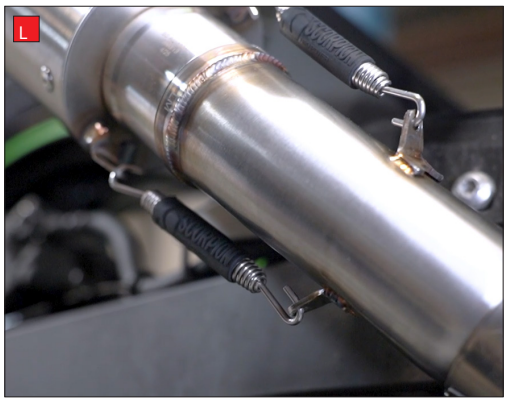







Bike	Kawasaki Ninja 7 Hybrid / Z7 Hybrid	**Part No.**	RKA-151
Year	2024-Current	**Fit Kit**	Z039.10770
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK23 - (Type V)

Estimated Fitting Time: 60 Minutes



Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.