
Box: PLOCK 1

BIKE	SUZUKI GSF650 BANDIT	PART NO.	RSI-98
YEAR	2007-11	FIT KITS	OVAL Z039.20407
NOTES	Use standard fittings where not supplied Remove standard gasket if fitted.	DB-Killer	SCEXDBK23 - (Type V)

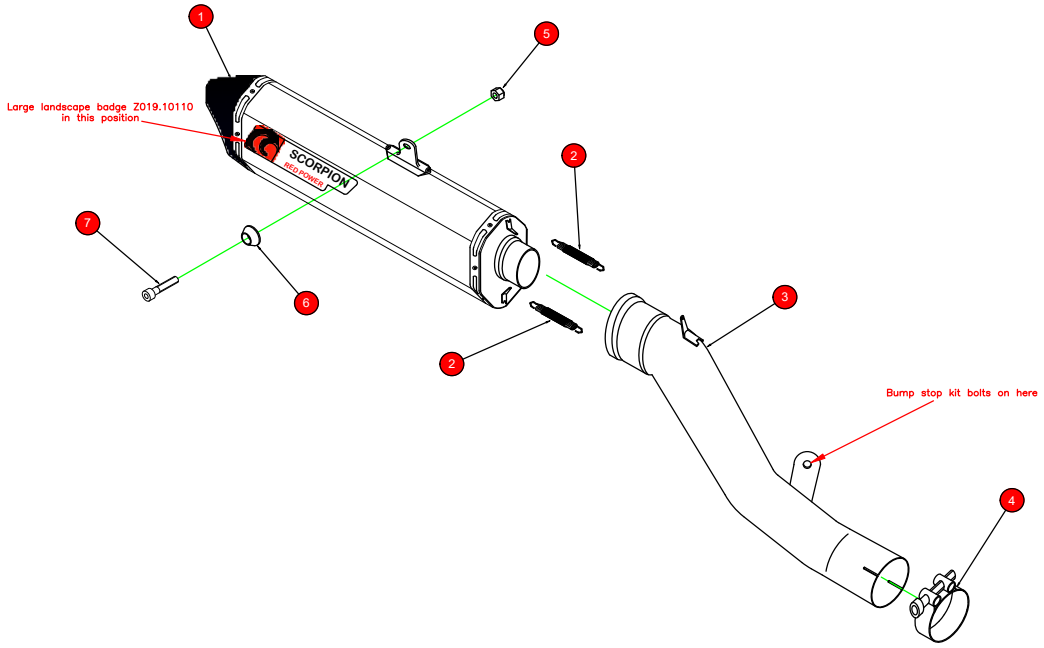

1	400mm Serket Silencer RSC 192
2	Rubber Coated Spring x 2 (Z028.10030)
3	Connecting pipe (Z035.10626)
4	55-59 Band Clamp (Z016.10004)
5	M8 Nyloc Nut (Z017.10062)
6	Alloy Bolt Finisher (Z026.20068)
7	M8 x 50mm Caphead Bolt (Z017.10078)
8	Bump Stop Kit (Z017.10010)

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	29/10/2026
ISSUE	10
AUTHORISED	G O'Shea

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



A) Remove original exhaust from bike, taking care to keep all original components in a safe place.

B) Refit Scorpion exhaust as per line diagram above.

C) When fitted take bike for a short ride to ensure all functions are correct.

D) When bike & exhaust are cool enough check all nuts and bolts are still secure.