
Bike	KTM Adventure 790 - Euro 5+	**Part No.**	KT-98-CR
Year	2023-Current	**Fit Kit**	Z039.10789
Notes	Where not supplied use original fittings.	**dB Killer**	N/A

Estimated Fitting Time: 60 Minutes

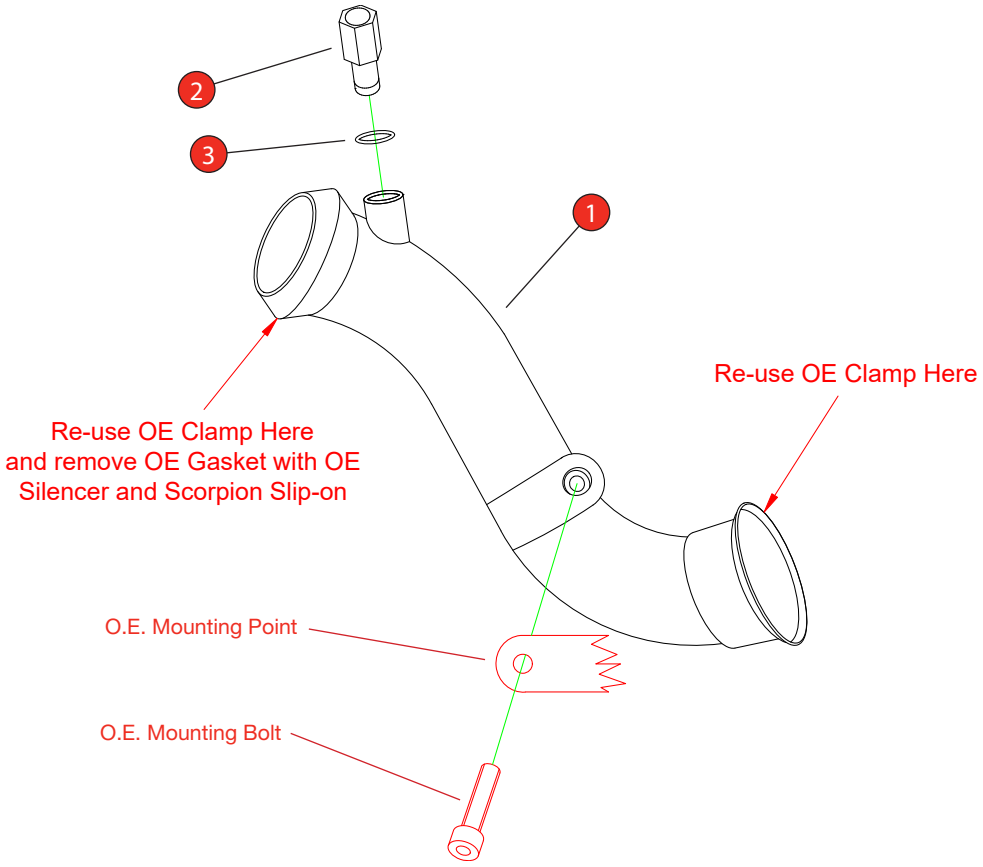


NO.	PART NO.	DESCRIPTION	QTY
1	CP1251	Catalyst Removal Pipe	1
Fit Kit - Z039.10789			
2	Z026.20182	M18 O2 Check Engine Light Eleminator	1
3	Z017.10218	M18 Copper Washer	1

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	No
DATE	29/01/2026
ISSUE	00
AUTHORISED	G O'Shea


NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Bike	KTM Adventure 790 - Euro 5+	**Part No.**	KT-98-CR
Year	2023-Current	**Fit Kit**	Z039.10789
Notes	Where not supplied use original fittings.	**dB Killer**	N/A

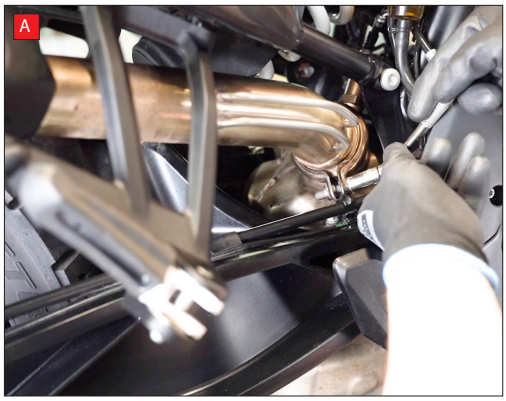






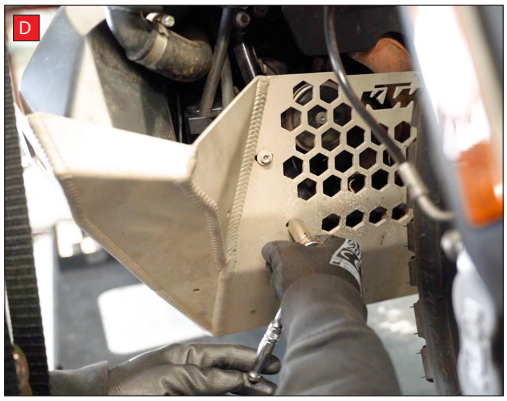







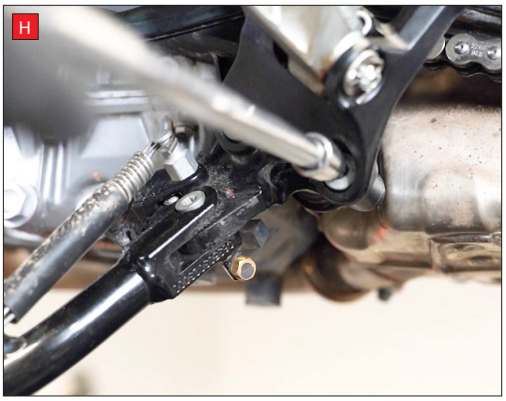

NOTE: During the fitting process you will need to remove the side stand from the bike, we would suggest mounting on a paddock stand or similar before starting the job.

A) Remove the exhaust clamp for the silencer.

B) Support the weight of the rear silencer, then remove the mounting bolt.

C) Carefully remove the silencer.

D) Remove the belly pan / skid plate, this process will differ depending on which one is fitted to your bike.


E) On the right side of the bike, remove the 2 lower mounting bolts for foot peg / brake lever.

F) Remove the upper mounting bolt for foot peg / brake lever.

G) Carefully move it to the side to get access to the catalyst mounting bolts behind it.

H) On the left side of the bike remove the 2 lower bolts from the foot peg / gear selector mount.

Bike	KTM Adventure 790 - Euro 5+	**Part No.**	KT-98-CR
Year	2023-Current	**Fit Kit**	Z039.10789
Notes	Where not supplied use original fittings.	**dB Killer**	N/A

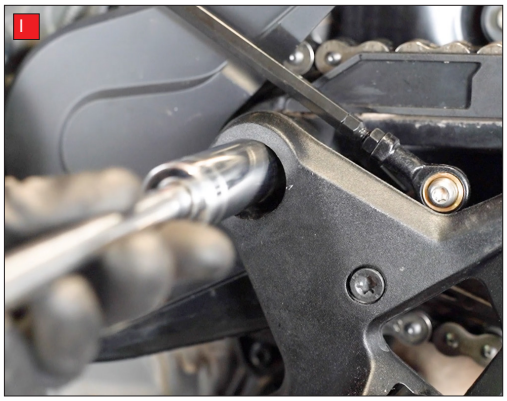



I) Remove the upper bolt and move the mount to one side to get access to the catalyst.

J) Remove the sprocket cover.

K) Remove the side stand.


L) Remove the lower mounting bolt for the catalyst.

M) Remove the Lambda sensor from the catalyst.

N) Remove the upper mounting bolt for the catalyst.


O) On the right side of the bike remove the mounting bolt for the catalyst.


P) Remove the exhaust clamp.

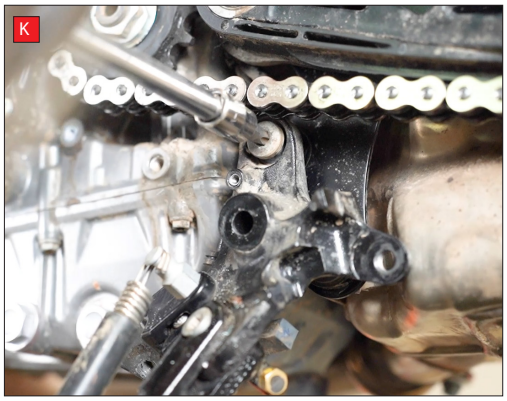






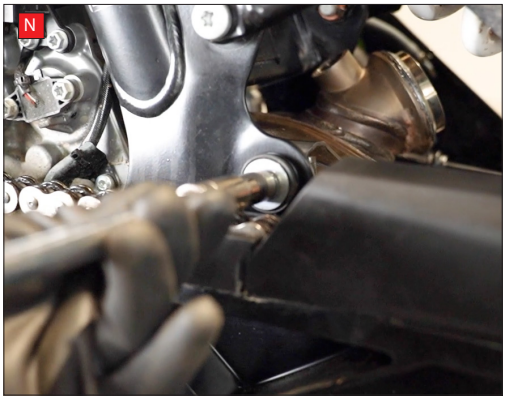

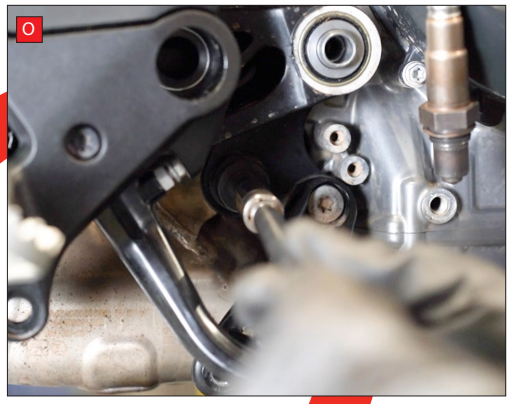



Bike	KTM Adventure 790 - Euro 5+	**Part No.**	KT-98-CR
Year	2023-Current	**Fit Kit**	Z039.10789
Notes	Where not supplied use original fittings.	**dB Killer**	N/A

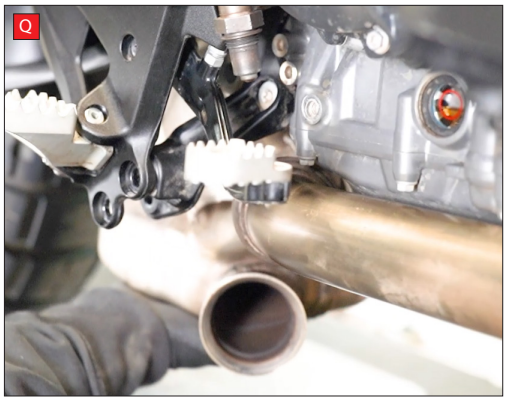




Q) Carefully remove the catalyst from the bike.

R) Screw the Lambda catalyst and copper washer into the Scorpion connecting pipe and fully tighten.

S) Fit the Scorpion catalyst removal pipe and loosely secure in place with the original mounting bolt, you will fully tighten in a later step.

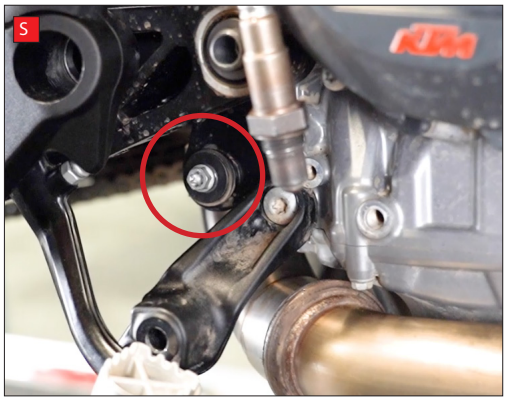





T) Fit the clamp, leave loose, you will fully tighten in a later step.

U) Fit the Lambda sensor to the connecting pipe.

SKIP TO X IF FITTING WITH SCORPION SLIP ON

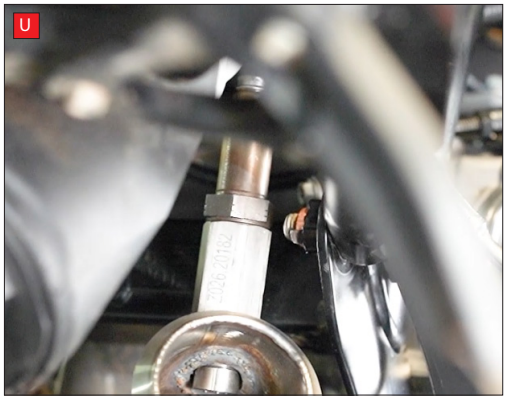

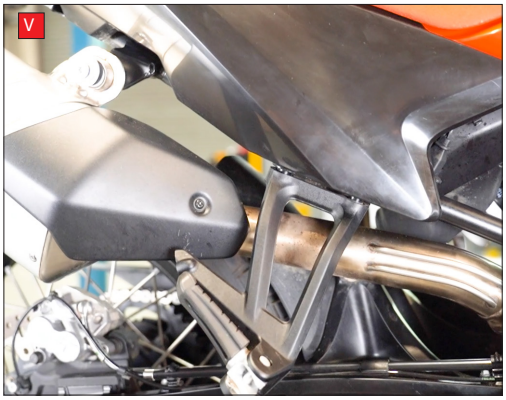

V) Roughly refit the original silencer and secure in place with the original mounting bolt. Leave loose for now, you will fully tighten in a later step.

W) Fit the exhaust clamp, leave loose, you will fully tighten in a later step.

SKIP TO AC IF FITTING WITH ORIGINAL SILENCER





X) Place the Scorpion silencer face down on a soft clean surface, then install the mounting bracket using the supplied spacers and mounting hardware. Leave loose for now you will fully tighten in a later step.

Bike	KTM Adventure 790 - Euro 5+	**Part No.**	KT-98-CR
Year	2023-Current	**Fit Kit**	Z039.10789
Notes	Where not supplied use original fittings.	**dB Killer**	N/A





Y) Fit the Scorpion link pipe to the catalyst replacement pipe using the original clamp. Leave loose for now, you will fully tighten in a later step.

Z) If using the flute for a quieter system, place it into the Scorpion connecting pipe. Slide the Scorpion silencer on to the connecting pipe and roughly align with the mounting point.





AA) Loosely secure in place with the supplied hardware. You will fully tighten in a later step.



AB) Fit the springs between the spring hoops on the silencer and connecting pipe.


AC) Adjust the system if necessary, then fully tighten the clamp between the header section of the original exhaust and the Scorpion catalyst replacement pipe.

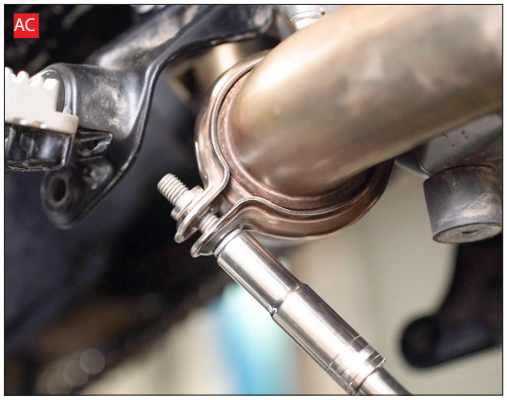

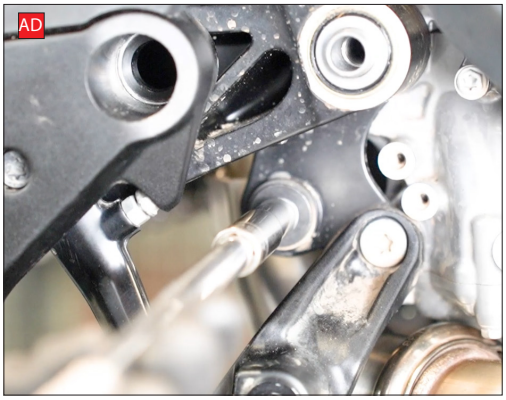

AD) Fully tighten the mounting bolt for the catalyst replacement pipe.

SKIP TO AG IF FITTING WITH SCORPION SLIP-ON

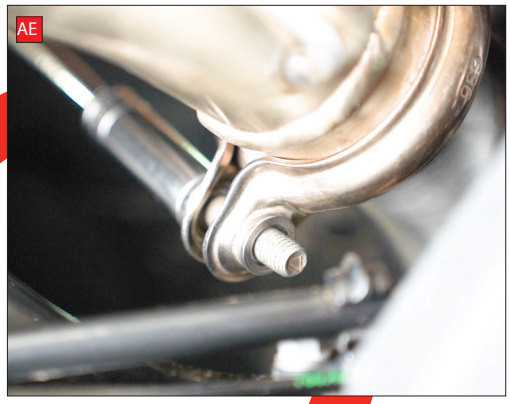



AE) Fully tighten the clamp between the catalyst replacement pipe and the silencer.





AF) Fully tighten the silencer mounting bolt.


Bike	KTM Adventure 790 - Euro 5+	**Part No.**	KT-98-CR
Year	2023-Current	**Fit Kit**	Z039.10789
Notes	Where not supplied use original fittings.	**dB Killer**	N/A

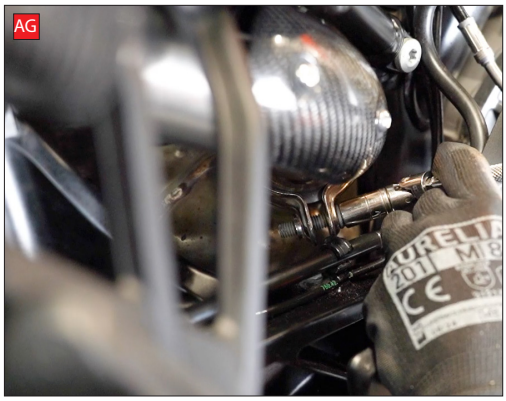

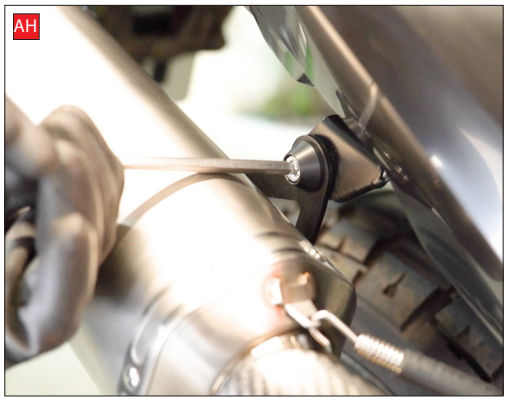

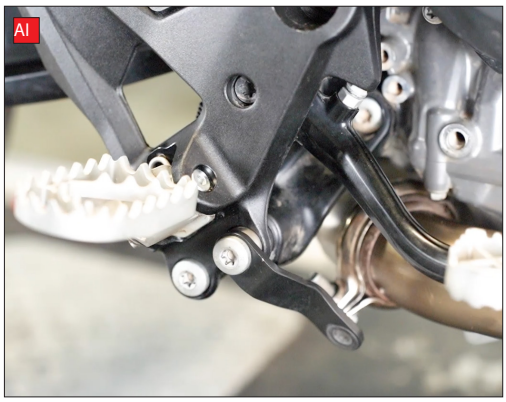

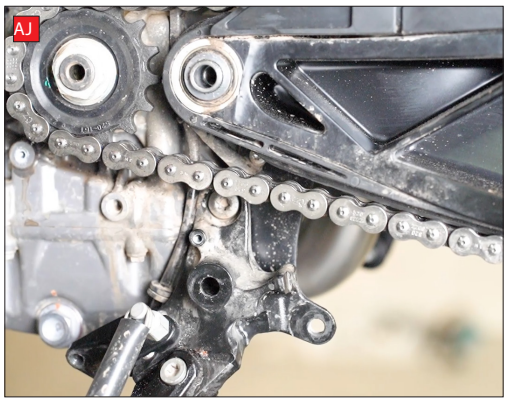

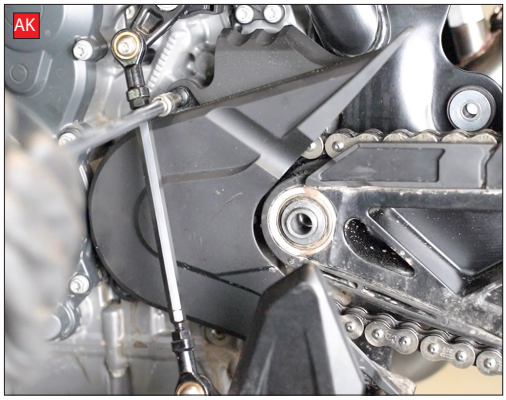





SKIP TO AI IF FITTING WITH ORIGINAL SILENCER

AG) Fully tighten the clamp between the catalyst replacement pipe and the Scorpion connecting pipe.

AH) Fully tighten the silencer mounting bolt and the bracket mounting bolts.

AI) Refit the footpeg / brake lever.

AJ) Refit the side stand.

AK) Refit the sprocket cover.

AL) Refit the footpeg / gear selector.

AM) Refit the belly pan / skid plate.

When fitted take bike for a short ride to ensure all functions are correct. When bike & exhaust are cool enough check all nuts and bolts are still secure.

Bike	KTM Adventure 790 - Euro 5+	**Part No.**	KT-98-CR
Year	2023-Current	**Fit Kit**	Z039.10789
Notes	Where not supplied use original fittings.	**dB Killer**	N/A

Estimated Fitting Time: 60 Minutes



Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.