
Bike	Kawaski Z650 RS	**Part No.**	PKA-142-SYS
Year	2022-2025	**Fit Kit**	Z039.10611
Notes	Where not supplied use original fittings. Re-use OEM Gaskets for the Headers only.	**dB Killer**	SCEXDBK47 (Type PB)

Estimated Fitting Time: 60 Minutes

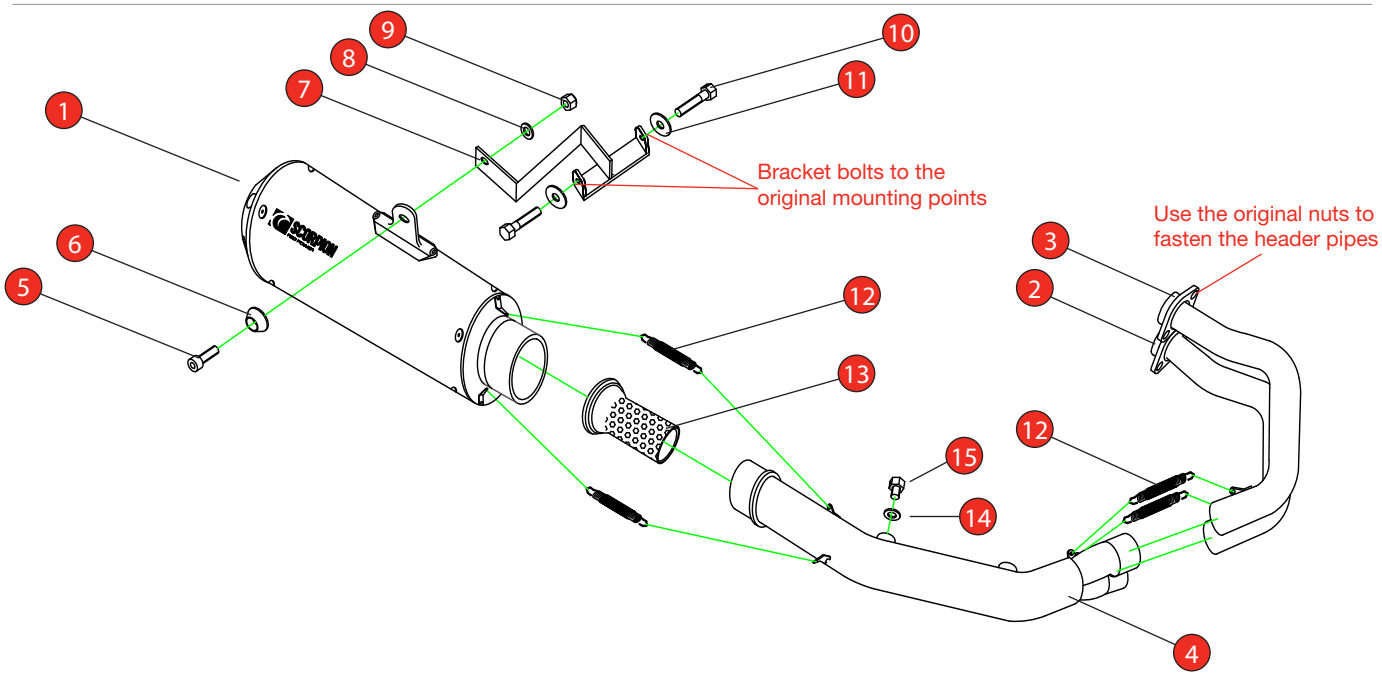


NO.	PART NO.	DESCRIPTION	QTY
1	PSC478	Red Power Silencer	1
2	CP1092	L/H Header Pipe	1
3	CP1093	R/H Header Pipe	1
4	CP1151	Collector	1
Fit Kit - Z039.10611			
5	Z017.10073	M8 x 25mm Cap Head Bolt	1
6	Z026.20068	Alloy Bolt Finisher	1
7	Z015.31326	Mounting Bracket	1
8	Z017.10831	M8 x 17mm Washer	1
9	Z017.10062	M8 Nyloc Nut	1
10	Z017.10052	M8 x 40mm Hex Head Bolt	2
11	Z017.10825	M8 x 25mm Washer	2
12	Z028.10030	Rubber Coated Spring	4
13	Z028.20188	Single Closed End Flute	1
14	Z017.10728	Copper Sealing Washer (For bikes with only 1 Lambda sensor)	1
15	Z017.12797	Blanking Plug (For bikes with only 1 Lambda sensor)	1

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	No
DATE	09/01/2026
ISSUE	02
AUTHORISED	G O'Shea

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Bike	Kawaski Z650 RS	Part No.	PKA-142-SYS
Year	2022-2025	Fit Kits	Z039.10611
Notes	Where not supplied use original fittings. Re-use OEM Gaskets for the Headers only.	dB Killer	SCEXDBK47 (Type PB)




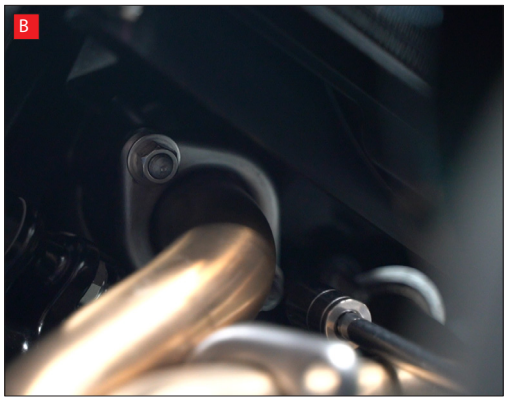

A) Remove the lambda sensor from the exhaust pipe. It is located on the collector at the front of the bike. Some bikes from 2023 onwards have a 2nd lambda sensor after the car, if your bike has the 2nd sensor remove that as well.

B) Remove the 4 header pipe nuts.




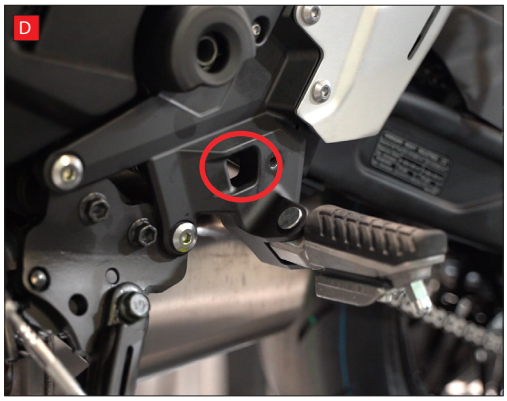

C/D) To gain access to the silencer mounting bolt you first need to remove the gear selector. 1 bolt holding it to the frame needs to be removed and then it can be carefully lowered to reveal an access hole in the frame.

E) Whilst supporting the weight of the silencer you can now undo the mounting bolt for the silencer and remove it through the access hole.

F) Now carefully lower the exhaust system out from under the bike.

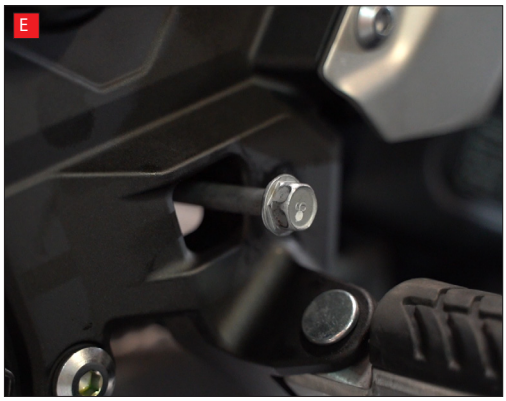




G) It's now time to install your new Scorpion Exhaust system. Start by inserting the Scorpion header pipes into the header ports on the engine and attach the flanges to the head using the original header nuts. Do not fully tighten the nuts at this stage to allow some adjustment.

H) Insert the other ends of the 2 header pipes into the collector pipe.



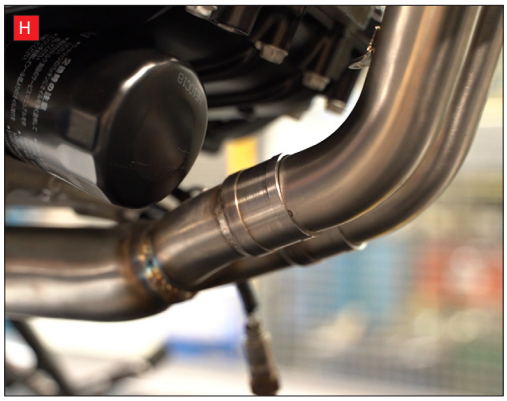

Bike	Kawaski Z650 RS	Part No.	PKA-142-SYS
Year	2022-2025	Fit Kits	Z039.10611
Notes	Where not supplied use original fittings. Re-use OEM Gaskets for the Headers only.	dB Killer	SCEXDBK47 (Type PB)







I) Place the Scorpion mounting bracket between the 2 original mounting points for the silencer and bolt on using the supplied hardware. Again at this stage these don't need to be fully tightened as we want some adjustability.

J) Slide the Scorpion silencer on to the connecting pipe.

K) Attach the silencer to the mounting bracket installed earlier with the supplied hardware.

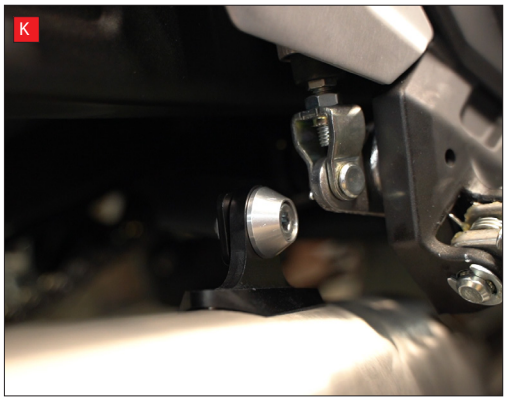


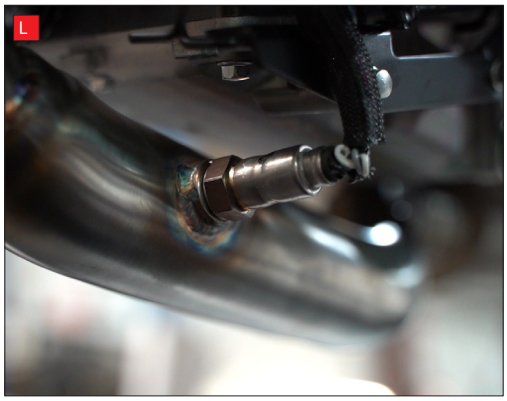

L) Re-install the lambda sensor in the Scorpion collector pipe. If you have 2 lambda sensors install the 2nd sensor in the 2nd location. If you only have 1 sensor, install the copper washer and blanking plug in the 2nd position instead.

M) Attach the suppled springs in all of the locations shown on the diagram on the 1st page.




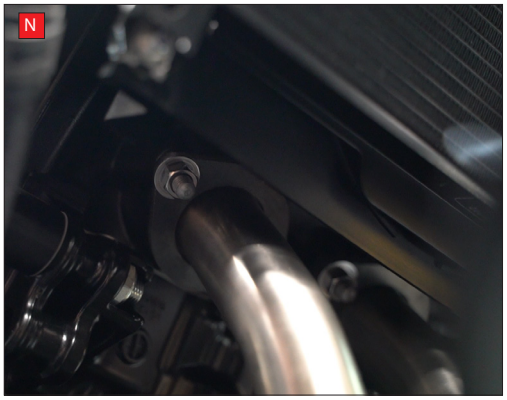

N) Adjust the system until you are happy everything lines up correctly and then begin to fully tighten all of the fixings starting with the 4 header nuts, followed by the 2 bolts that attach the silencer mounting bracket to the frame and finally the bolt attaching the silencer to the mounting bracket.

O) Now you can re-install the gear selector.



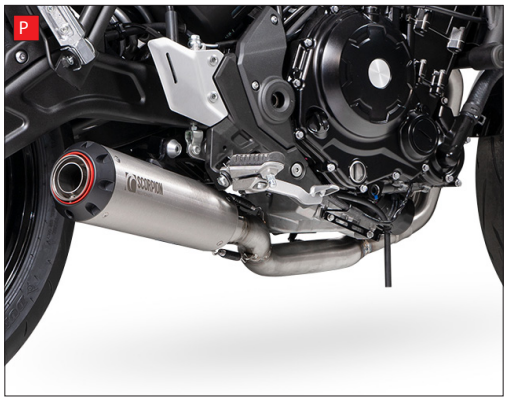

P) When fitted take the bike for a short ride to ensure all functions are correct. Once the bike & exhaust are cool enough check all nuts and bolts are still secure.

Bike	Kawaski Z650 RS	**Part No.**	PKA-142-SYS
Year	2022-2025	**Fit Kit**	Z039.10611
Notes	Where not supplied use original fittings. Re-use OEM Gaskets for the Headers only.	**dB Killer**	SCEXDBK47 (Type PB)

Estimated Fitting Time: 60 Minutes



Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.