
Bike	Honda CB750 Hornet	**Part No.**	RHA-200
Year	2023-Current	**Fit Kit**	Z039.10731
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK24 - (TYPE W)

Estimated Fitting Time: 30 Minutes

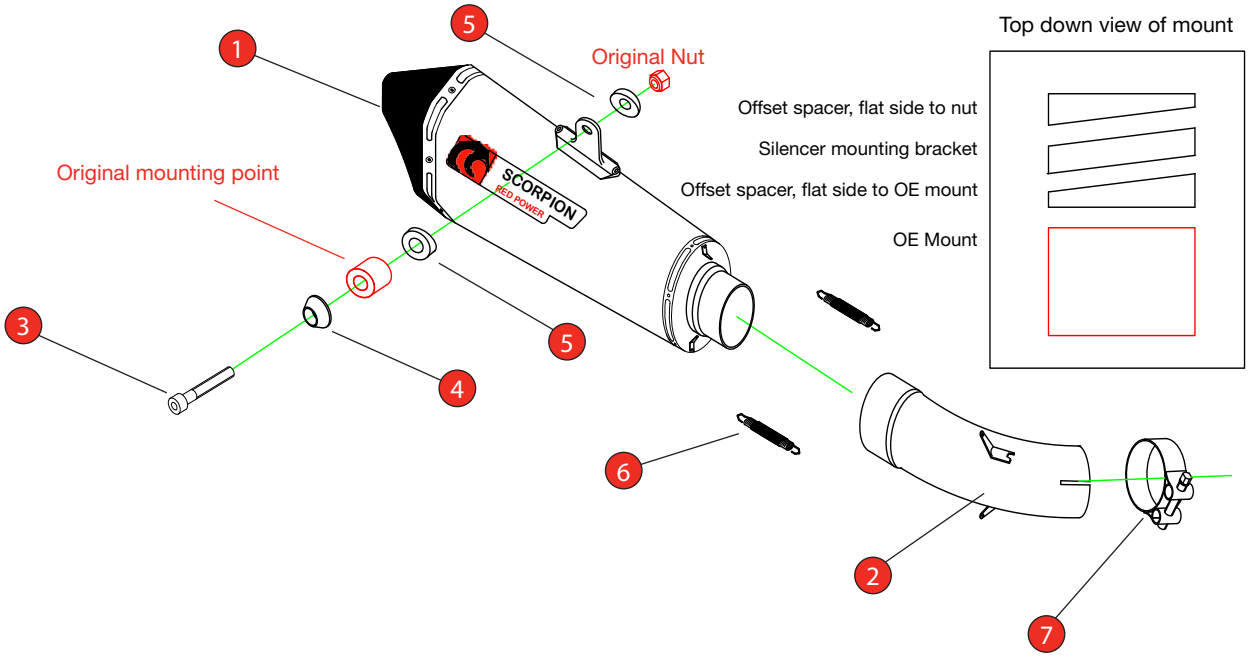


NO.	PART NO.	DESCRIPTION	QTY
1	RSC541	Serket Taper Silencer	1
2	CP1181	Connecting Pipe	1
Fit Kit - Z039.10731			
3	Z017.10079	M8 x 55mm Caphead Bolt	1
4	Z026.20068	Alloy Bolt Finisher	1
5	Z026.20353	Offset Spacer	2
6	Z028.10030	Rubber Coated Spring	2
7	Z016.10002	51-55mm Clamp	1

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	28/10/2026
ISSUE	02
AUTHORISED	G O'Shea

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Bike	Honda CB750 Hornet	Part No.	RHA-200
Year	2023-Current	Fit Kits	Z039.10731
Notes	Where not supplied use original fittings	dB Killer	SCEXDBK24 - (TYPE W)

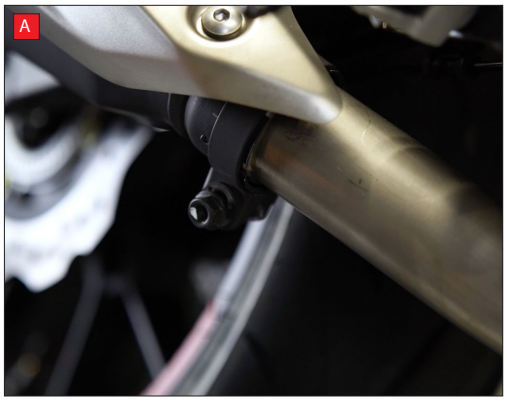














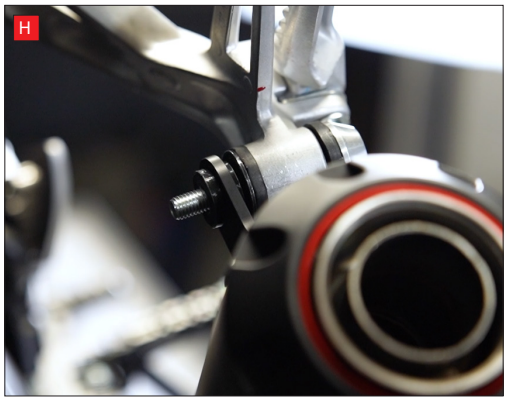

NOTE: The instructions show fitting of the Red Power Slip-on, the Serket Taper Slip-on fits the same way.

A) Loosen the clamp on the rear silencer.

B) Remove the rear silencer mounting bolt.

C) Carefully remove the rear silencer. If the gasket stays on the pipe remove that as well as it's not needed with the Scorpion Slip-on.

D) Slide the connecting pipe along with the clamp onto the original exhaust.

E) Slide the supplied bolt and bolt finisher through the original silencer mounting point on the bike.

F) Slide the offset spacer over the mounting bolt with the flat side facing the OE mount and the small side towards the back of the bike.

G) Slide the Scorpion silencer onto the connecting pipe and align the mounting bracket with the bolt.


H) Place the 2nd offset spacer onto the bolt. The mitred side should be facing the Scorpion bracket and the large end of the spacer facing the back of the bike.

Bike	Honda CB750 Hornet	Part No.	RHA-200
Year	2023-Current	Fit Kits	Z039.10731
Notes	Where not supplied use original fittings	dB Killer	SCEXDBK24 - (TYPE W)







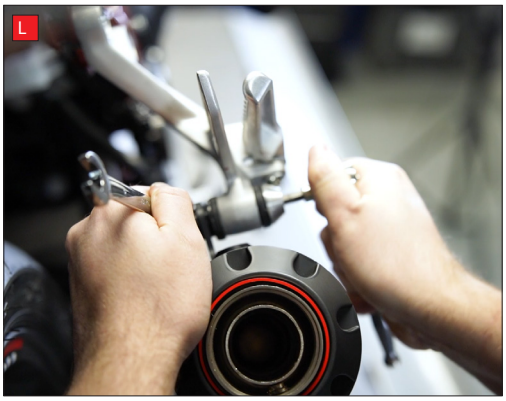

I) Secure in place with the original mounting nut but don't fully tighten at this stage.

J) Attach the springs between the spring hoops.

K) Fully tighten the clamp.

L) Fully tighten the silencer mounting bolt.

Take the bike for a short ride to ensure all functions are correct. When the bike & exhaust are cool enough check all nuts and bolts are still secure.

Bike	Honda CB750 Hornet	**Part No.**	RHA-200
Year	2023-Current	**Fit Kit**	Z039.10731
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK24 - (TYPE W)

Estimated Fitting Time: 30 Minutes



Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.