
Bike	Yamaha MT-07	Part No.	PYA-121-SYS
Year	2022-2024	Fit Kit	Z039.10708
Notes	Does not fit bikes with 2 Lambda sensors. Where not supplied use original fittings	dB Killer	SCEXDBK47 - (TYPE PB)

Estimated Fitting Time: 1 Hour 30 Minutes

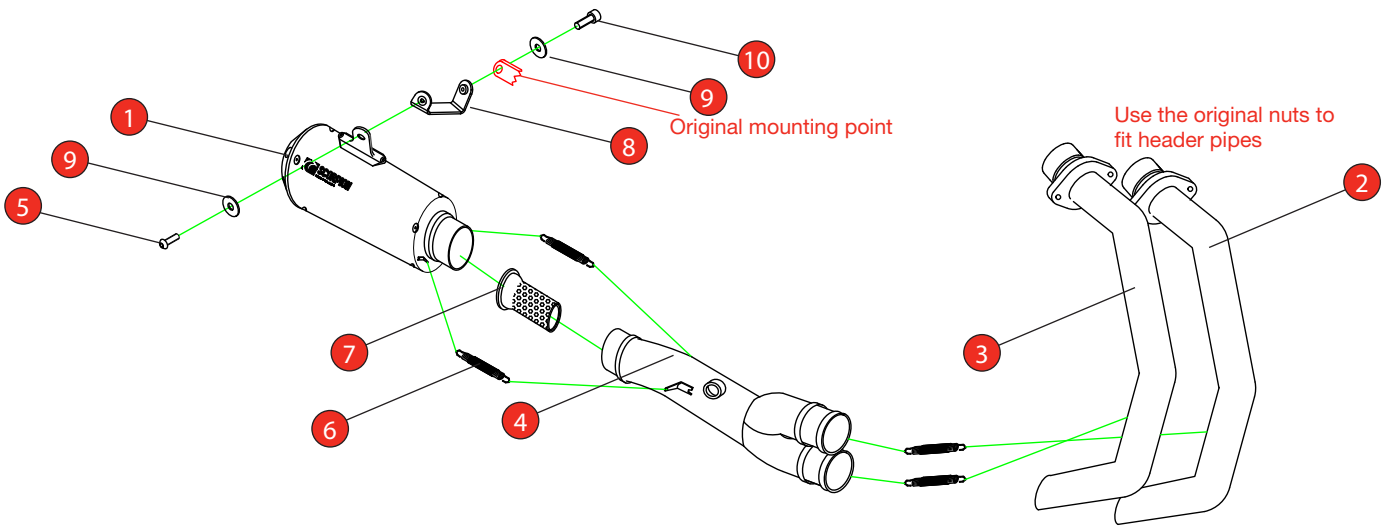

NO.	PART NO.	DESCRIPTION	QTY
1	PSC509	Red Power Silencer	1
2	CP1153	L/H Header Pipe	1
3	CP1154	R/H Header Pipe	1
4	CP1155	Collector Pipe	1
Fit Kit - Z039.10708			
5	Z017.10110	M8 x 25mm Button Head Bolt	1
6	Z028.10030	Rubber Coated Spring	4
7	Z028.20188	Closed End Flute	1
8	Z015.31545	Mounting Bracket	1
9	Z017.10825	M8 x 25mm Washer	2
10	Z017.10076	M8 x 40mm Cap Head Bolt	1

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	26/03/2025
ISSUE	03
AUTHORISED	S Shipley

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.


Bike	Yamaha MT-07	Part No.	PYA-121-SYS
Year	2022-2024	Fit Kits	Z039.10708
Notes	Does not fit bikes with 2 Lambda sensors. Where not supplied use original fittings	dB Killer	SCEXDBK47 - (TYPE PB)





A) Start by removing the 2 screws from the catalytic convertor heat shield to allow you to remove it from the bike.

B) Unscrew the Lambda sensor from the cat.

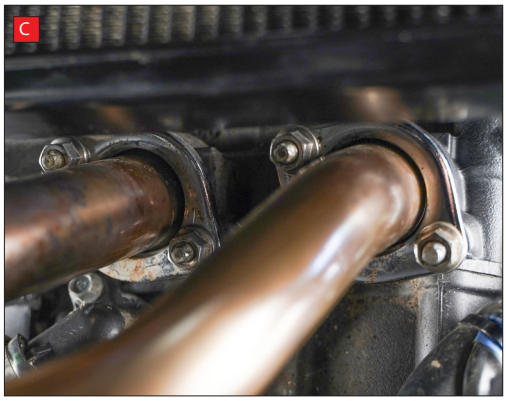



C) Remove the 4 nuts from the header pipe flanges.

D) Remove the left side silencer mounting bolt behind the gear selector.

E) Supporting the weight of the system remove the right side silencer mounting bolt behind the rear brake lever.

F) Carefully remove the full exhaust system from the bike.






G) Install the left and right header pipes using the original header nuts. Do not fully tighten them at this point so that the position can be adjusted when fitting the rest of the system.

H) Slide the collector pipe onto the header pipes. The Lambda sensor boss should be on the top.





Bike	Yamaha MT-07	Part No.	PYA-121-SYS
Year	2022-2024	Fit Kits	Z039.10708
Notes	Does not fit bikes with 2 Lambda sensors. Where not supplied use original fittings	dB Killer	SCEXDBK47 - (TYPE PB)

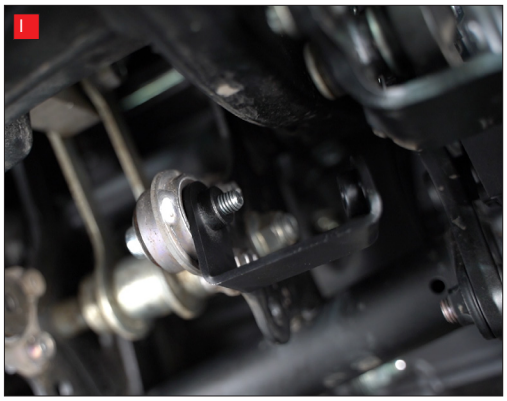




I) Install the new silencer bracket with the supplied hardware as per the diagram.

J) Slide the silencer onto the collector pipe. Photo shows the Serket silencer, Red power fits in the same way.

K) Attach the silencer to the silencer bracket using the supplied hardware. Leave slightly loose for now to allow adjustment.

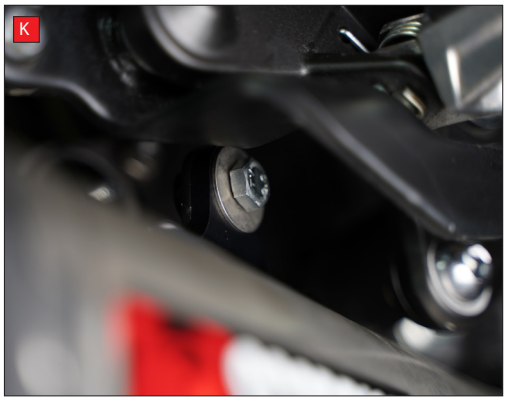




L) Install the springs between the silencer and the collector pipe and between the collector pipe and the header pipes.

M) Reinstall the Lambda sensor. Before screwing into the pipe twist the sensor in reverse direction several times. This will prevent the cable from being twisting up as you screw the sensor in.

N) Adjust the position of the system to where you're happy that it has clearance around it and there's no stress on any joints, then fully tighten the header nuts, silencer to mounting bracket bolt and mounting bracket to frame bolt.

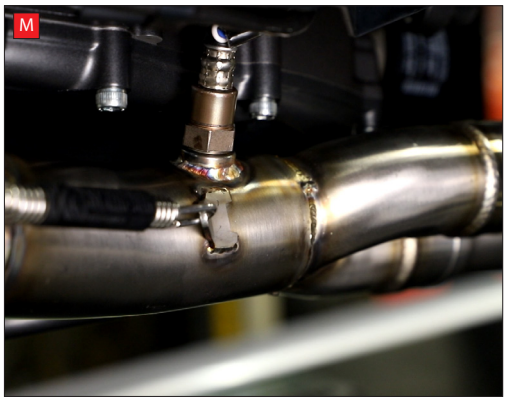



Bike	Yamaha MT-07	Part No.	PYA-121-SYS
Year	2022-2024	Fit Kit	Z039.10708
Notes	Does not fit bikes with 2 Lambda sensors. Where not supplied use original fittings	dB Killer	SCEXDBK47 - (TYPE PB)
Estimated Fitting Time: 1 Hour 30 Minutes			



Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.