
Box: PLOCK 1

BIKE	KAWASAKI Z800	PART NO.	RKA-98
YEAR	2013 - 2016	FIT KITS	Z039.20482
NOTES	Where not supplied use original fittings. Remove OE gasket before fitting item 2	DB-Killer	SCEXDBK23 - (Type V)

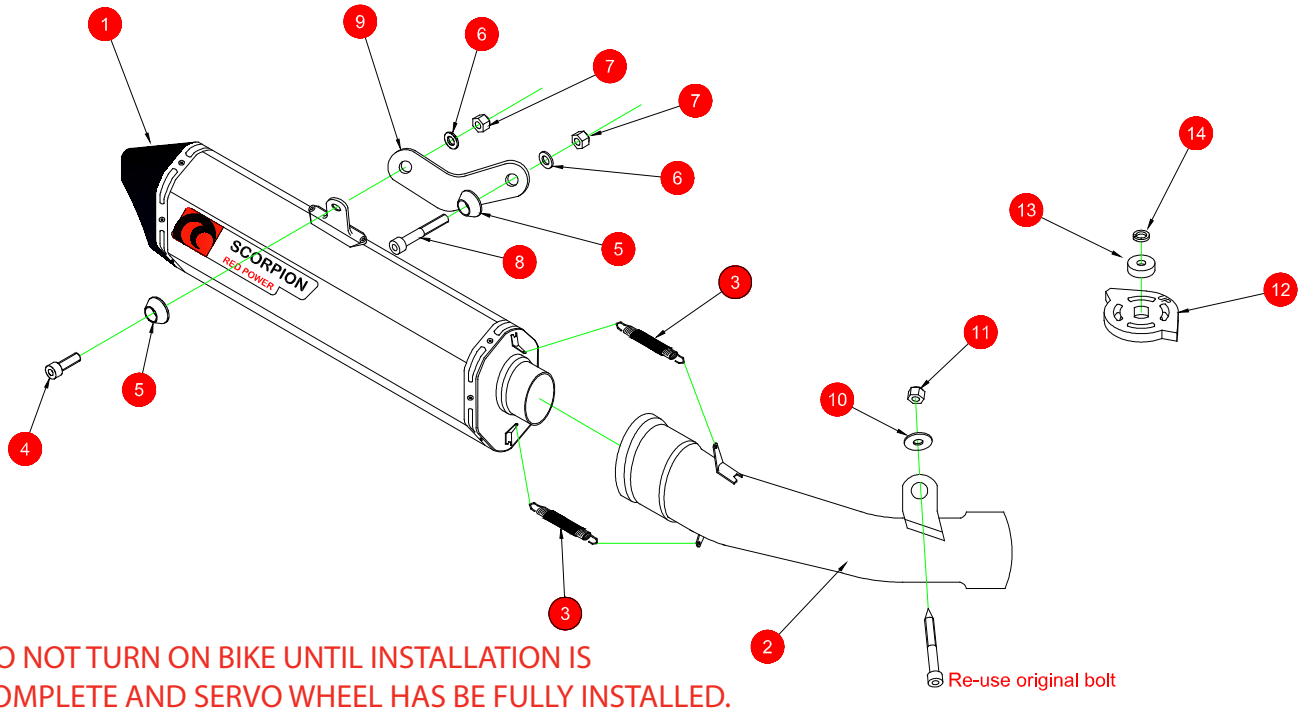

DO NOT TURN ON BIKE UNTIL INSTALLATION IS COMPLETE AND SERVO WHEEL HAS BE FULLY INSTALLED.

1	RSC-192 400mm Serket Silencer	8	M8x55mm Cap Head Bolt (Z017.10079)
2	Connecting Pipe CP716	9	Mounting Bracket (Z015.30941)
3	Rubber Coated Springs (Z028.10030)	10	M10x25mm Washer (Z017.11014)
4	M8x25mm Cap Head Bolt (Z017.10073)	11	M10x1.25 FINE THREAD Nyloc Nut (Z017.11018)
5	2 x Alloy Bolt Finishers (Z026.20068)	12	Replacement Servo Wheel (Z007.10955)
6	2 x M8x25mm Washers (Z017.10825)	13	Aluminium Coller (Z026.20045)
7	2 x Nyloc Nuts (Z017.10062)	14	M6 Split Washer (Z017.10027)

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	28/10/2026
ISSUE	07
AUTHORISED	G O'Shea

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



Box: PLOCK 1

BIKE	KAWASAKI Z800	PART NO.	RKA-98
YEAR	2013 - 2016	FIT KITS	Z039.20482
NOTES	Where not supplied use original fittings. Remove OE gasket before fitting item 2	FEATURES	

CONTINUED FROM OVERLEAF:



A) Remove pilion seat.



B) Remove bracket holding riders seat.



C) Remove riders seat.



D) Remove screw from right hand plastic trim.

E) Remove top bolt from right hand plastic trim.

F) Slide plastic trim off velcro.

G) Remove servo wheel. DO NOT TURN SHAFT, remove wheel from shaft and cable spring retainer.

H) Remove heat shield off original exhaust.










Box: PLOCK 1

BIKE	KAWASAKI Z800	PART NO.	RKA-98
YEAR	2013 - 2016	FIT KITS	Z039.20482
NOTES	Where not supplied use original fittings. Remove OE gasket before fitting item 2	FEATURES	

CONTINUED FROM OVERLEAF:

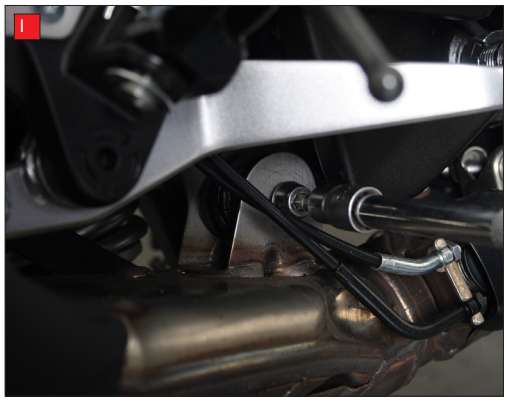



I) Remove bolt from bracket.

J) Remove bolt from the clamp.


K) Remove exhaust mounting bolt and nut from pillion foot peg. Undo cable clip on the inside of the frame to relase cables from bike.






L) Carefully remove standerd silencer, slowley remove feeding out the cables, PLEASE TAKE CARE.

M) Fit Scorpion servo wheel with collar, washer and original bolt, ensure "UP" is facing you, tighten to 5 ft/lb, DO NOT TURN SHAFT.

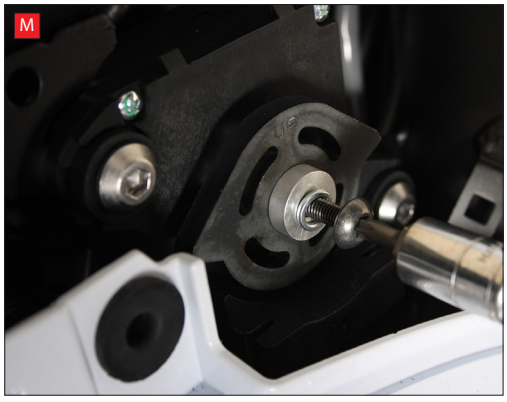

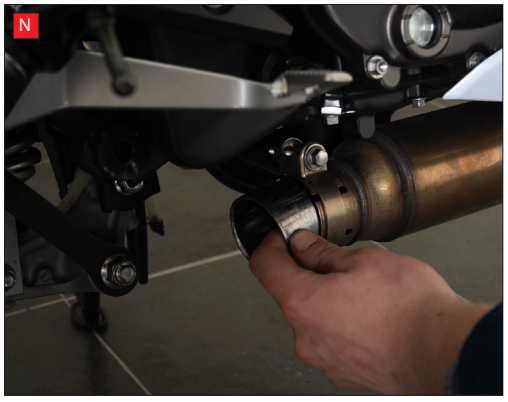


N) Remove original gasket from the standard pipe.

O) Fit Scorpion link pipe, using standard bolt and use the washer and nut provided. Then tighten up the clamp.

P) Fit Scorpion silencer to the connecting pipe, attach the two springs and using item's 3, 4, 5, 6, 7, 8 and 9 mount the silencer to the pillion foot peg as shown in line diagram.



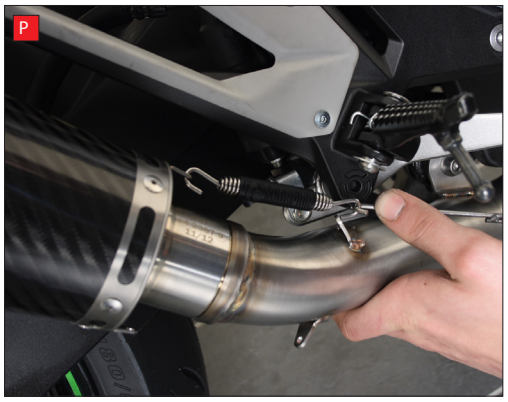

Ensure all clamps and bolts are secure, re-fit plastic trim and both seat. Run the bike for 10 minutes, re-check all bolts and clamps are secure.

Box: PLOCK 1

BIKE	KAWASAKI Z800	PART NO.	RKA-98
YEAR	2013 - 2016	FIT KITS	Z039.20482
NOTES		FEATURES	

Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

"Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes."