
Bike	Kawasaki Ninja 500 (Euro 5+)	**Part No.**	PKA-149
Year	2024-Current	**Fit Kit**	Z039.10631
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK47 - (Type PB)

Estimated Fitting Time: 60 Minutes

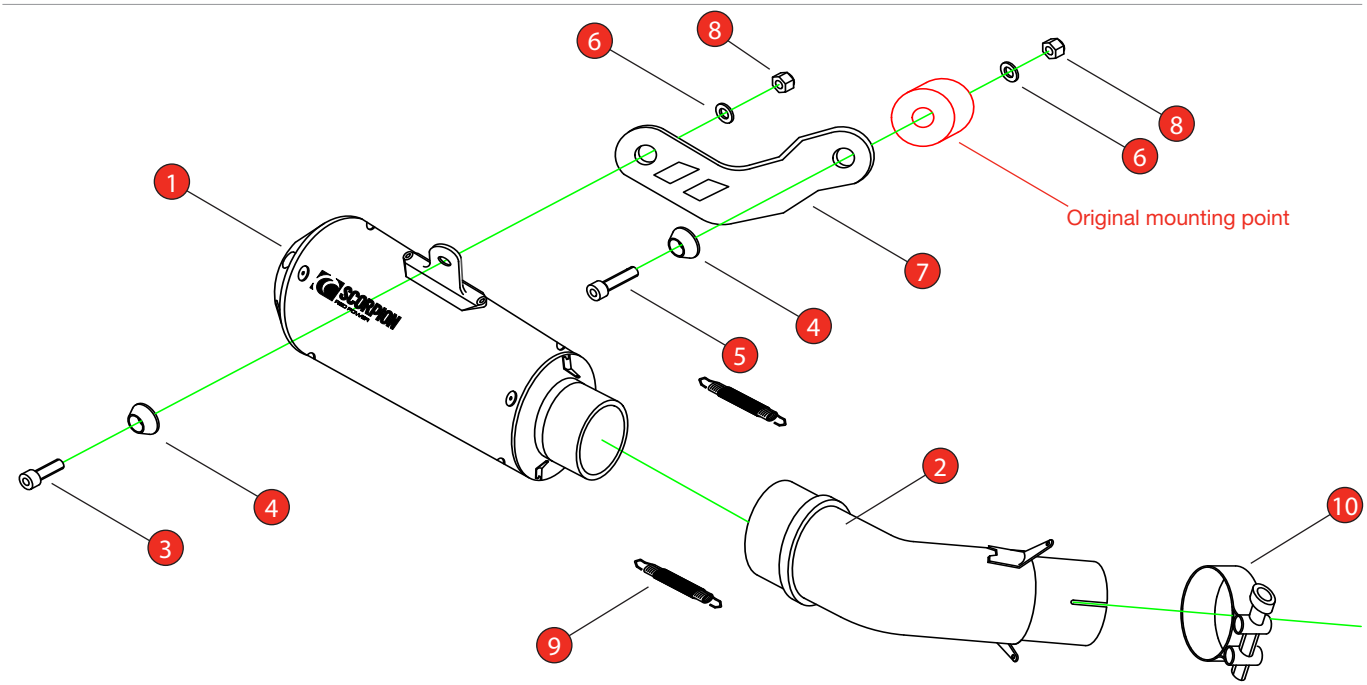


NO.	PART NO.	DESCRIPTION	QTY
1	PSC536	Red Power Silencer	1
2	CP993	Connecting Pipe	1
Fit Kit - Z039.10631			
3	Z017.10074	M8 x 30mm Cap Head Bolt	1
4	Z026.20068	Alloy Bolt Finisher	2
5	Z017.10076	M8 x 40mm Cap Head Bolt	1
6	Z017.10831	M8 x 17mm Washer	2
7	Z015.31027	Mounting Bracket	1
8	Z017.10062	M8 Nyloc Nut	2
9	Z028.10030	Rubber Coated Spring	2
10	Z016.10008	43-47mm Clamp	1

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.


CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	27/10/2026
ISSUE	01
AUTHORISED	G O'Shea

https://youtu.be/lZ34wRr_2nA

Bike	Kawasaki Ninja 500 (Euro 5+)	Part No.	PKA-149
Year	2024-Current	Fit Kits	Z039.10631
Notes	Where not supplied use original fittings	dB Killer	SCEXDBK47 - (Type PB)

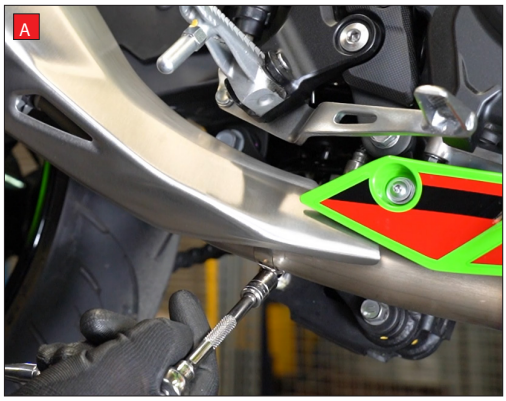




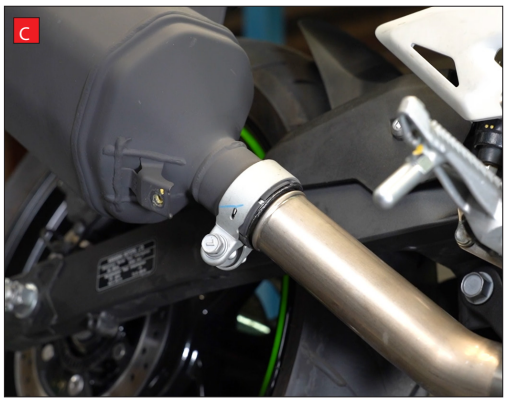





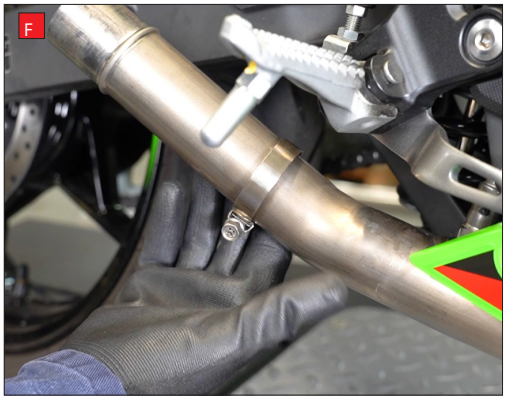





NOTE: The instructions show a Serket silencer being fitted. The Red Power silencer fits the same way.

A) Loosen the clamp for the exhaust cover.

B) Remove the bolt from the exhaust cover, then slide the cover forward to remove it from the bike.

C) Loosen the exhaust clamp.

D) Remove the silencer mounting bolt. There's a nut on the back that you will need to hold.

E) Carefully remove the silencer and gasket (you do not need a gasket when fitting the Scorpion Slip-on).

F) Remove the clamp for the exhaust cover.

G) Slide the connecting pipe and supplied clamp onto the original exhaust.

H) Loosely fit the mounting bracket to the Scorpion silencer using the supplied hardware. You will fully tighten in a later step.

Bike	Kawasaki Ninja 500 (Euro 5+)	Part No.	PKA-149
Year	2024-Current	Fit Kits	Z039.10631
Notes	Where not supplied use original fittings	dB Killer	SCEXDBK47 - (Type PB)






I) Slide the Scorpion silencer onto the connecting pipe and align the bracket with the mounting point on the bike.

J) Loosely secure in place with the supplied hardware. You will fully tighten in a later step.

K) Fit the springs between the spring hoops.

L) Fully tighten the exhaust clamp.

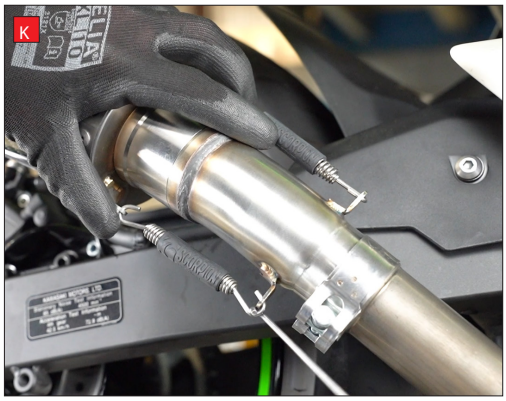



M) Fully tighten both mounting bolts.

Take the bike for a short ride to ensure all functions are correct. When the bike & exhaust are cool enough check all nuts and bolts are still secure.



Bike	Kawasaki Ninja 500 (Euro 5+)	**Part No.**	PKA-149
Year	2024-Current	**Fit Kit**	Z039.10631
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK47 - (Type PB)

Estimated Fitting Time: 60 Minutes



Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.