
Bike	Yamaha Tracer 7/700 inc GT Euro 5+	**Part No.**	RYA-136-SYS
Year	2025-Current	**Fit Kit**	Z039.10788
Notes	Where not supplied use original fittings	**dB Killer**	SCEXDBK24 - (TYPE W)

Estimated Fitting Time: 1 Hour

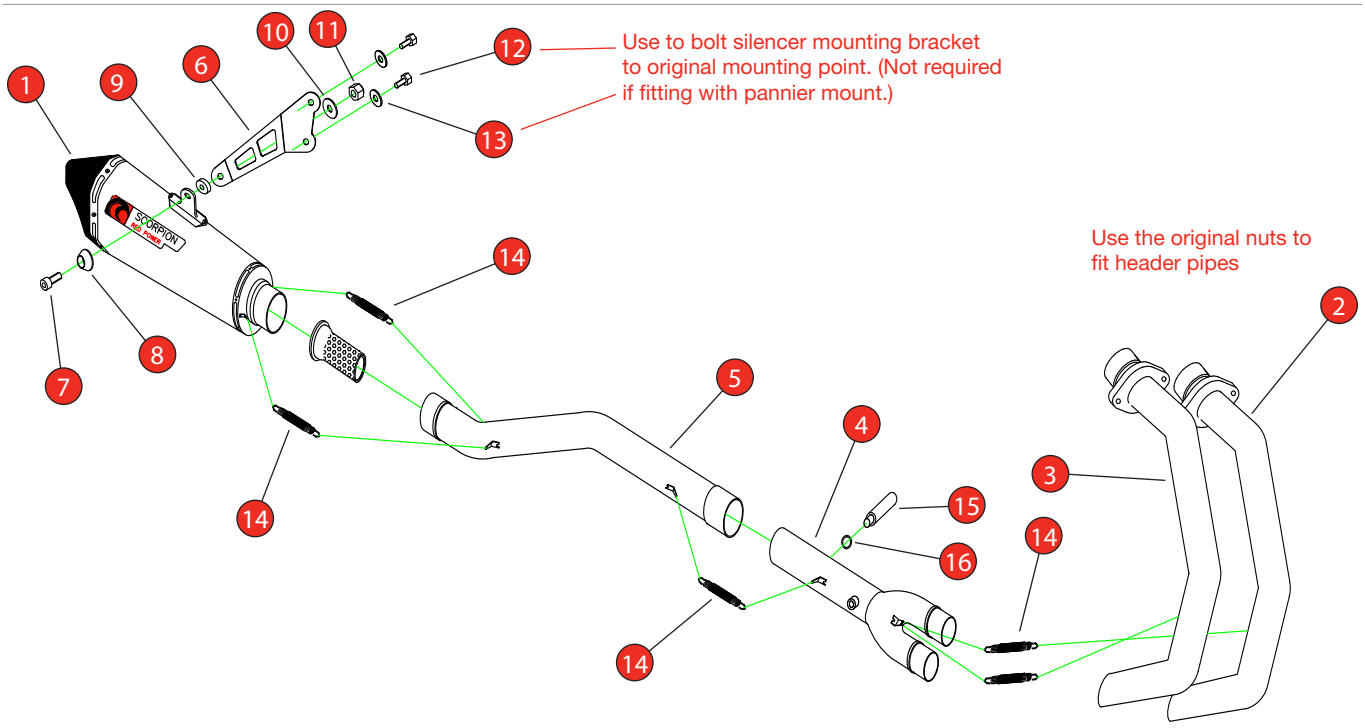



NO.	PART NO.	DESCRIPTION	QTY
1	RSC534	Serket Taper Silencer	1
2	CP1153	L/H Header Pipe	1
3	CP1154	R/H Header Pipe	1
4	CP1249	Collector Pipe	1
5	CP1250	Connecting Pipe	1
Fit Kit - Z039.10708			
6	Z015.31625	Silencer Mounting Bracket	1
7	Z017.10073	M8 x 25mm Cap Head Screw	1
8	Z026.20068B	Black Anodised Bolt Finisher	1
9	Z026.20281	5mm Black Anodised Spacer (Only Required if Fitting with Pannier Mount)	1
10	Z017.10825	M8 x 25mm Washer	1
11	Z017.10062	M8 Nyloc Nut	1
12	Z017.10043	M8 x 16mm Hex Head Bolt (Not Required if Fitting with Pannier Mount)	2
13	Z017.10831	M8 x 17mm Washer (Not Required if Fitting with Pannier Mount)	2
14	Z028.10030	Swivel Head Rubber Coated Spring	5
15	Z026.20185	Lambda Catalyst	1
16	Z017.10728	M12 Copper Washer	1

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	22/12/2025
ISSUE	00
AUTHORISED	G O'Shea

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.

Bike	Yamaha Tracer 7/700 inc GT Euro 5+	Part No.	RYA-136-SYS
Year	2025-Current	Fit Kits	Z039.10788
Notes	Where not supplied use original fittings	dB Killer	SCEXDBK24 - (TYPE W)

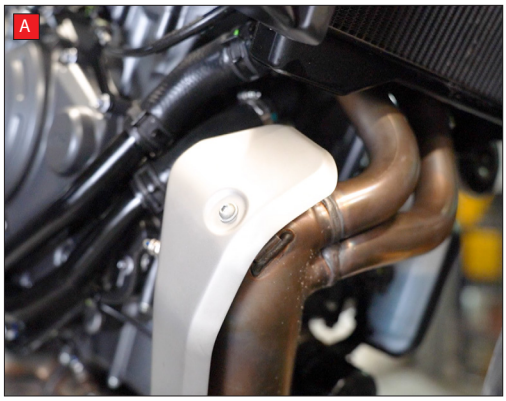

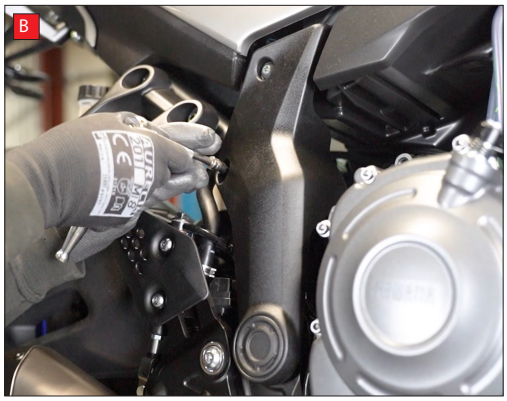

A) Remove the 2 bolts from the heat shield, then remove the heat shield.

B) Remove the 2 bolts from the wiring cover, then gently pull it away from the bike to remove it.

C) Gently pull the 2 Lambda sensor cables out of the cable clips along the bottom of the engine.


D) Disconnect both Lambda sensor plugs.


E) Remove the first Lambda sensor.


F) Remove the second Lambda sensor.


G) Remove the header nuts.


H) On the left hand side of the bike, remove the silencer mounting bolt.

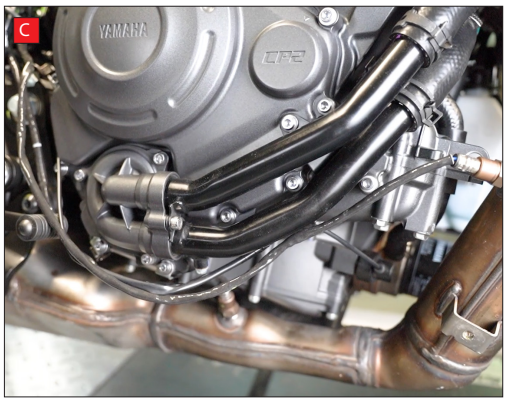


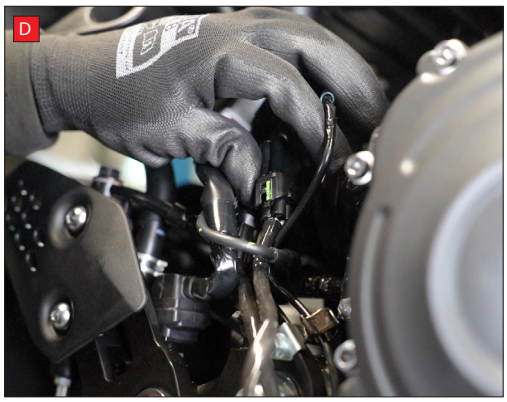

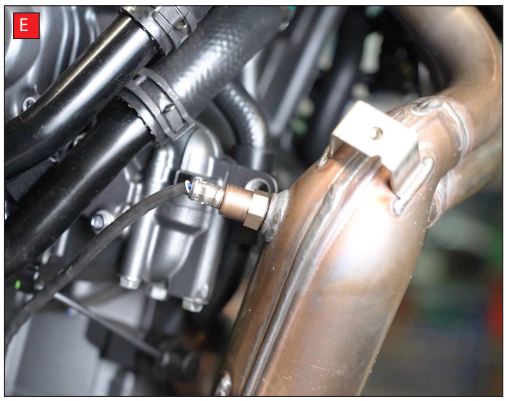


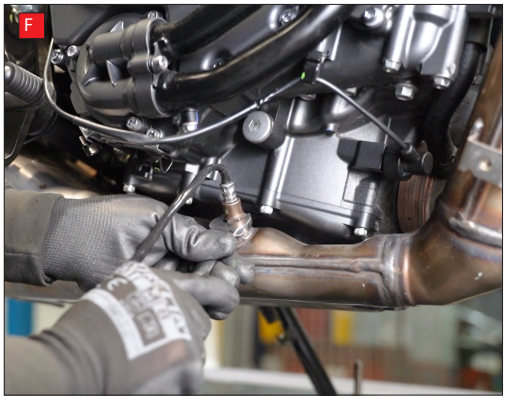


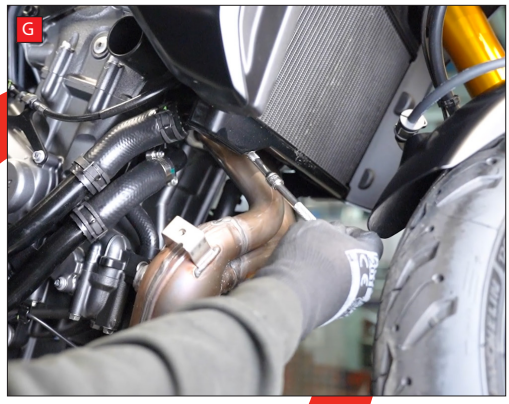

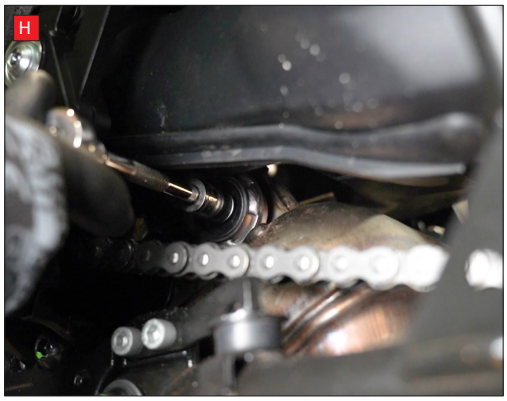

Bike	Yamaha Tracer 7/700 inc GT Euro 5+	Part No.	RYA-136-SYS
Year	2025-Current	Fit Kits	Z039.10788
Notes	Where not supplied use original fittings	dB Killer	SCEXDBK24 - (TYPE W)

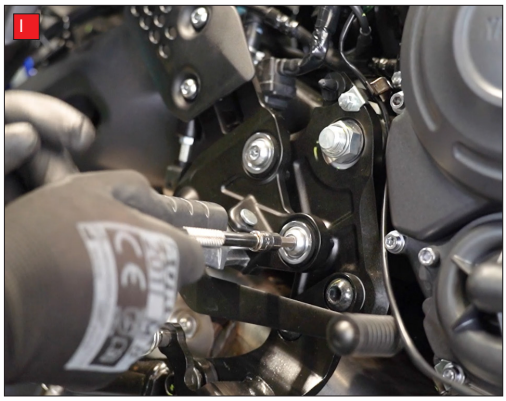


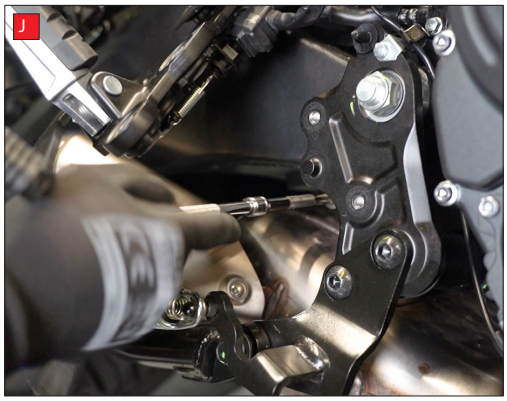

I) Remove the two bolts from the rear brake lever mount and move it to the side to get access to the silencer mounting bolt.

J) Supporting the weight of the exhaust, remove the silencer mounting bolt.

K) Carefully remove the original exhaust.

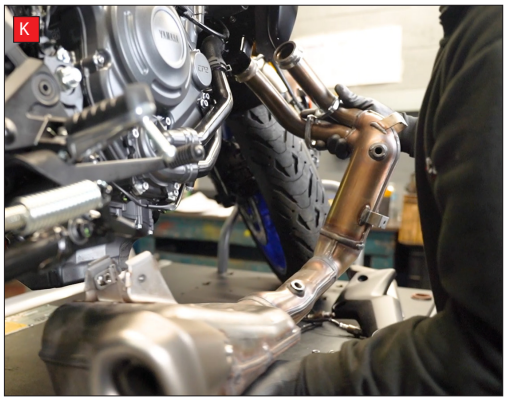




L) Fit the Scorpion header pipes and secure in place with the original nuts. Leave loose for now, you will fully tighten in a later step.

M) Slide the Scorpion collector on to the header pipes.

N) Slide the Scorpion connecting pipe on to the collector.

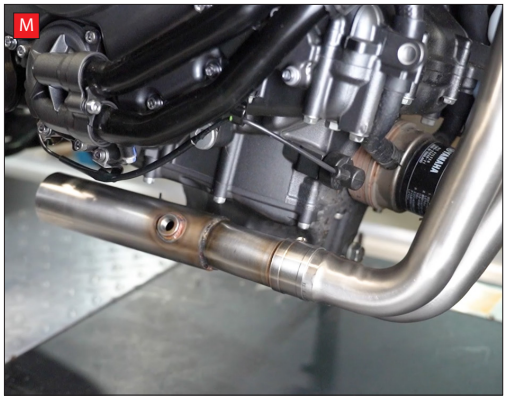



O) If your bike has pannier mounts on the rear foot pegs, remove the one on the right side of the bike (you will refit it in the next step).

P) Place the Scorpion bracket behind the pannier mount and reinstall using the original bolts. If you don't have the pannier mount, bolt the Scorpion bracket directly to the foot peg using the supplied hardware.







Bike	Yamaha Tracer 7/700 inc GT Euro 5+	Part No.	RYA-136-SYS
Year	2025-Current	Fit Kits	Z039.10788
Notes	Where not supplied use original fittings	dB Killer	SCEXDBK24 - (TYPE W)








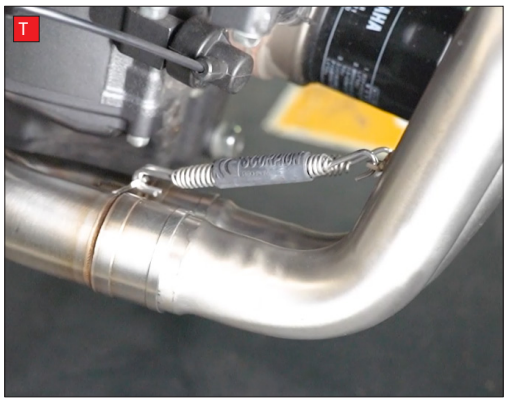

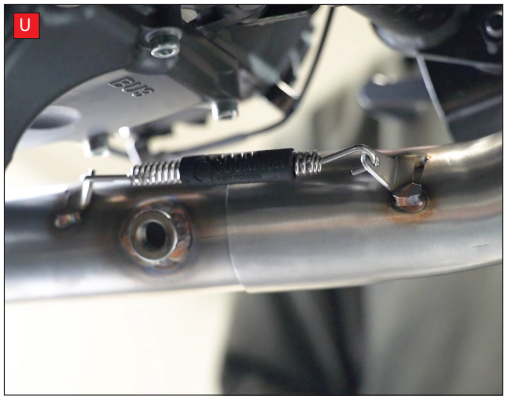

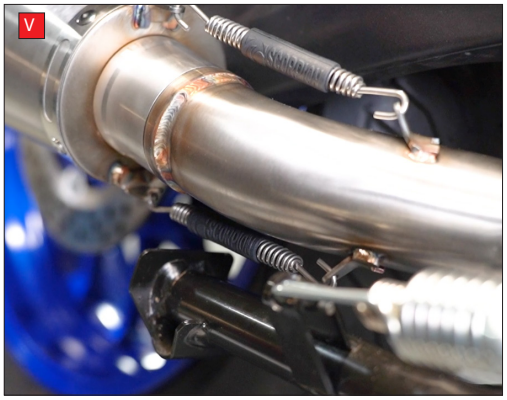





Q) For a quieter system, place the supplied flute into the connecting pipe.

R) Slide the Scorpion silencer on to the connecting pipe and align with the mounting bracket.

S) Secure in place with the supplied hardware. If fitting with the pannier mount you will need to use the supplied spacer between the silencer and the bracket, if you haven't got the pannier mount you don't need the spacer. Leave loose for now, you will fully tighten in a later step.

T) Fit the springs between the headers and the collector.

U) Fit the spring between the collector and connecting pipe.


V) Fit the springs between the silencer and the connecting pipe.

W) Fully tighten the header nuts.


X) Fully tighten the silencer mounting bolt.

Bike	Yamaha Tracer 7/700 inc GT Euro 5+	Part No.	RYA-136-SYS
Year	2025-Current	Fit Kits	Z039.10788
Notes	Where not supplied use original fittings	dB Killer	SCEXDBK24 - (TYPE W)



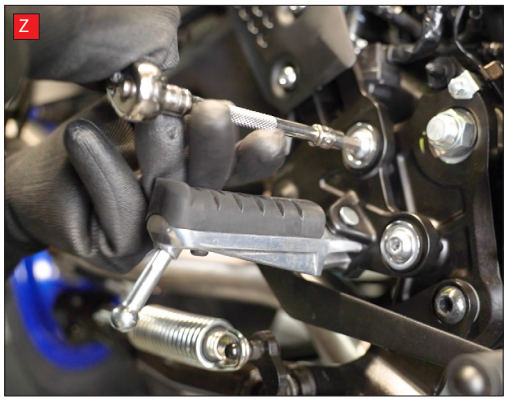




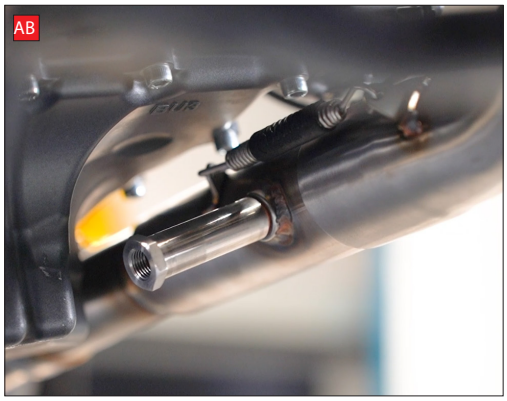





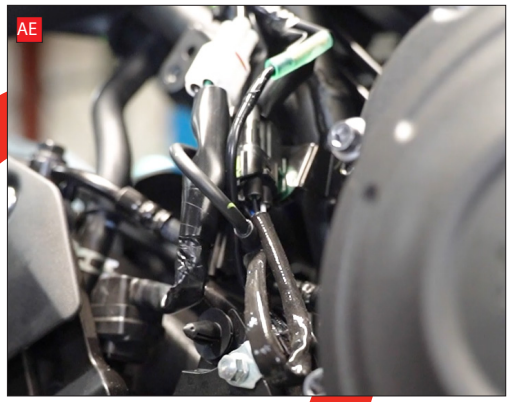



Y) Fully tighten the mounting bracket bolts.

Z) Re-fit the rear brake lever and fully tighten the mounting bolts.

AA) Fit the first Lambda sensor into the collector, fully tighten.

AB) Screw the Lambda catalyst with copper washer into 2nd sensor boss in the collector.

AC) Screw the 2nd Lambda sensor into the Lambda catalyst. Fully tighten both.

AD) Feed the cable for the 2nd Lambda sensor back up to the wiring plug and reconnect.

AE) Feed the cable for the 1st Lambda sensor back up to the wiring plug and reconnect. Use the original cable clip to bundle the cables back together.

AF) Re-fit the wiring cover.

When fitted take bike for a short ride to ensure all functions are correct. When bike & exhaust are cool enough check all nuts and bolts are still secure.

Bike	Yamaha Tracer 7/700 inc GT Euro 5+	Part No.	RYA-136-SYS
Year	2025-Current	Fit Kits	Z039.10788
Notes	Where not supplied use original fittings	dB Killer	SCEXDBK24 - (TYPE W)



Thank you for purchasing your Scorpion Silencer.
Care of your exhaust: Please refrain from cleaning silencer with heavy solvents or abrasives!

Vielen Dank Fur den kauf eines Scorpion Schalldampfers! Pflegehinweis: Bitte verwenden Sie niemals Scheuermittel oder aggressive Reiniger zur Pflege Ihres Auspuffes!

Merci d'avoir choisi un echappement Scorpion.
Entretien de votre silencieux: Ne pas utiliser de solvants ou de produits abrasifs!

Muchas gracias por adquirir un Silencioso Scorpion. Le recomendamos no limpiar el silencioso con productos abrasivos o aquellos que contengan disolventes.