
Box: PLOCK 1

BIKE	KAWASAKI Z800	PART NO.	RKA-100
YEAR	2013 - 2016	FIT KITS	Z039.20479
NOTES	Where not supplied use original fittings.	DB-Killer	SCEXDBK23 - (Type V)

DO NOT TURN ON BIKE UNTIL INSTALLATION IS COMPLETE AND SERVO WHEEL HAS BE FULLY INSTALLED.

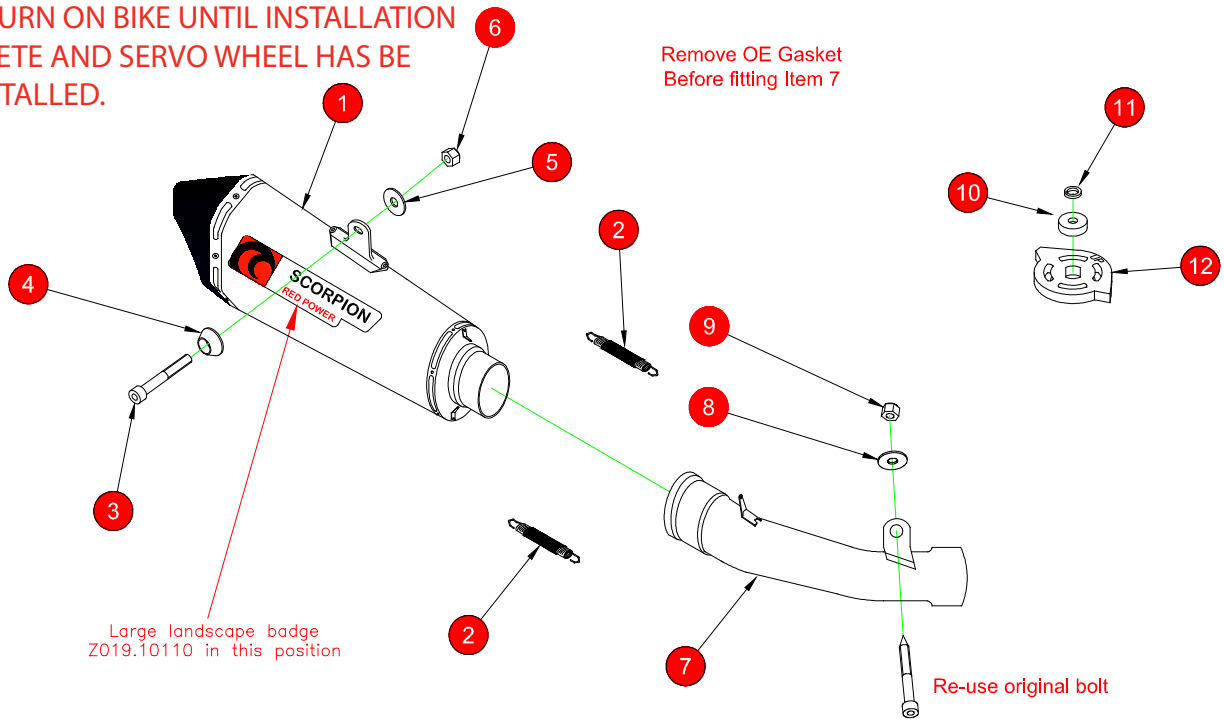

1	RSC-533 Conical Serket Silencer	7	Connecting Pipe CP710
2	2 x Rubber Coated Springs (Z028.10030)	8	M10x25mm Washer (Z017.11014)
3	M8x60mm Cap Head Bolt (Z017.10080)	9	M10x1.25 FINE THREAD Nyloc Nut (Z017.11018)
4	Alloy Bolt Finisher (Z026.20068)	10	Aluminium Coller (Z026.20045)
5	M8x25mm Washer (Z017.10825)	11	M6 Split Washer (Z017.10027)
6	M8 Nyloc Nut (Z017.10062)	12	Replacement Servo Wheel (Z007.10955)

CLASSIFICATION	Closed Circuit Product
HOMOLOGATED	NO
DATE	28/10/2026
ISSUE	08
AUTHORISED	G O'Shea

NOTE: ENSURE SCORPION SYSTEM IS CLEAR OF MOVING PARTS AND ALL ORIGINAL FUNCTIONS WORK CORRECTLY.



SCORPION RED POWER

Box: PLOCK 1

BIKE	KAWASAKI Z800	PART NO.	RKA-100
YEAR	2013 - 2016	FIT KITS	Z039.20479
NOTES	Where not supplied use original fittings.	FEATURES	

CONTINUED FROM OVERLEAF:





A) Remove pilion seat.

B) Remove bracket holding riders seat.

C) Remove riders seat.

D) Remove screw from right hand plastic trim.

E) Remove top bolt from right hand plastic trim.

F) Slide plastic trim off velcro.

G) Remove servo wheel. DO NOT TURN SHAFT, remove wheel from shaft and spring retainer.


H) Remove heat shield off original exhaust.









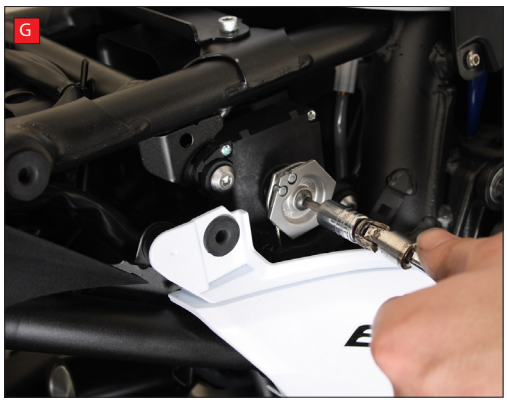



Box: PLOCK 1

BIKE	KAWASAKI Z800	PART NO.	RKA-100
YEAR	2013 - 2016	FIT KITS	Z039.20479
NOTES	Where not supplied use original fittings.	FEATURES	

CONTINUED FROM OVERLEAF:





I) Remove bolt from bracket.

J) Remove bolt from the clamp.

K) Remove exhaust mounting bolt and nut from pillion foot peg.

L) Carefully remove standerd silencer, slowley remove feeding out the cables, PLEASE TAKE CARE.

M) Fit Scorpion servo wheel with collar, washer and original bolt, ensure "UP" is facing you, tighten to 5 ft/lb, DO NOT TURN SHAFT.







N) Remove original gasket from the standard pipe.

O) Fit Scorpion link pipe, using standard bolt and use the washer and nut provided. Then tighten up the clamp.

P) Fit Scorpion silencer to the connecting pipe, attach the two springs and using item's 3, 4, 5, and 6 mount the silencer to the pillion foot peg.

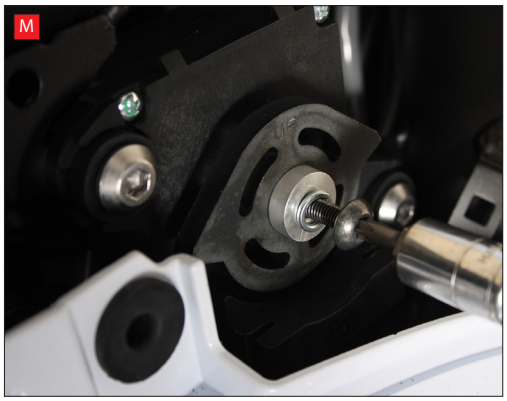

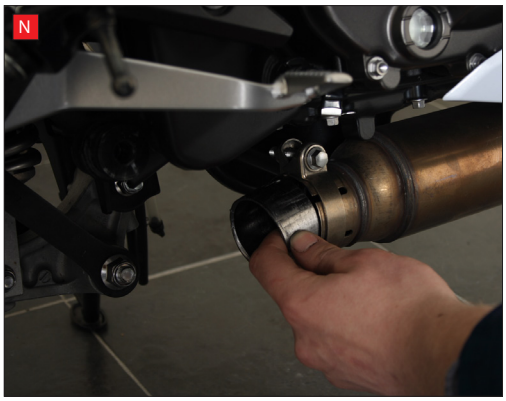

Ensure all clamps and bolts are secure, re-fit plastic trim and both seat. Run the bike for 10 minutes, re-check all bolts and clamps are secure.



